

630 En/EnN Installation, operating, and maintenance manual

Contents

1 Declaration of conformity	5
2 Declaration of incorporation	6
3 When you unpack your pump	7
3.1 Unpacking your pump	7
3.2 Packaging disposal	7
3.3 Inspection	7
3.4 Components supplied	7
3.5 Storage	7
4 Information for returning pumps	8
5 Peristaltic pumps - an overview	8
6 Warranty	9
7 Safety notes	10
8 Pump specifications	13
8.1 Specification ratings	13
8.2 Weights	13
8.3 Pumphead options	14
9 Good pump installation practice	15
9.1 General recommendations	15
9.2 Dos and don'ts	16
10 Pump operation	17
10.1 Keypad Layout and Key IDs	17
10.2 Starting and stopping	18
10.3 Using up and down keys	18
10.4 Maximum speed	18
10.5 Change rotation direction	18
11 Connecting to a power supply	19
11.1 Conductor colour coding	20

11.2 Wiring the NEMA module	20
11.3 Earth screening of control cables on NEMA module	20
11.4 Ethernet M12 connector screen connection	21
12 Start-up check list	22
13 Control wiring	23
13.1 Pump external interface parameters	24
13.2 Features on the rear of the pump	25
13.3 IP31 Wiring connections	26
13.4 Sensor Wiring - IP31	26
13.5 IP66 Wiring - N Module	30
13.6 Input/output connectors - IP66	33
13.7 Network topology	35
14 Switching the pump on for the first time	36
14.1 Selecting the display language	36
14.2 First-time start-up defaults	38
15 Switching the pump on in subsequent power cycles	39
16 Mode menu	40
17 Manual	41
17.1 START	41
17.2 STOP	41
17.3 INCREASING AND DECREASING FLOW RATE	42
17.4 MAX FUNCTION (Manual mode only)	42
18 Flow calibration	43
18.1 Setting the flow calibration	43
19 EtherNet/IP™ mode	45
19.1 Configure EtherNet/IP™ Settings	45
19.2 EtherNet/IP™ mode	49
19.3 Example for http connection between pump and PC (peer-to-peer)	49
19.4 Setting up the PC	50
19.5 Connecting the PC to the pump	51
19.6 Connecting using the web browser	52
19.7 Connecting to a PLC	52
19.8 Pump parameters	56

20 Sensors	68
20.1 Sensor wiring	68
20.2 Setting up the sensors	69
20.3 Start up delay	73
20.4 Generic Sensors	75
20.5 Flow Sensor Reading	81
21 Main menu	82
21.1 Security settings	84
21.2 General settings	95
22 Help	105
22.1 Help	105
23 Troubleshooting	106
23.1 Error codes	106
23.2 Technical support	107
24 Drive maintenance	108
25 Drive spares	109
26 Pumphead replacement	110
26.1 Pumphead replacement	110
27 Tube replacement	112
27.1 Continuous tubing	112
27.2 Tube elements	113
28 Ordering information	115
28.1 Pump part numbers	115
28.2 Tubing and element part numbers	116
28.3 CIP and SIP procedures	120
28.4 Pumphead spares	121
29 Performance data	125
29.1 620RE, 620RE4 and 620R performance data	125
30 Trademarks	129
31 Disclaimers	130
32 Publication history	131

Original instructions

The original instructions for this manual have been written in English. Other language versions of this manual are a translation of the original instructions

1 Declaration of conformity



Watson-Marlow Limited
Falmouth
Cornwall
TR11 4RU
England



EC Declaration of Conformity

1. 530 Cased pumps (Models: S, SN, U, UN, Du, DuN, Bp, BpN, En, EnN)
630 Cased pumps (Models: S, SN, U, UN, Du, DuN, Bp, BpN, En, EnN)
730 Cased pumps (Models: SN, UN, DuN, BpN, En, EnN)
2. Manufacturer:
Watson Marlow Ltd
Bickland Water Road
Falmouth
TR11 4RU
UK
3. This declaration of conformity is issued under the sole responsibility of the manufacturer
4. All models and versions of the 530, 630 and 730 series of cased peristaltic pump with all approved pump heads, tubing and accessories.
5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:
Machinery Directive 2006/42/EC
EMC Directive 2014/30/EC
ROHS Directive 2015/863
6. Harmonised standards used:
BS EN61010-1:2010 third edition Safety requirements for electrical equipment for measurement, control, and laboratory use Part 1: General requirements
EN61326-1:2013 Electrical equipment for measurement, control and laboratory use – EMC requirements Part 1: General requirements
BS EN 60529:1992+A2:2013 Degrees of protection provided by enclosures (IP code)
7. Intertek Testing and Certification Ltd, No: 3272281, performed compliance testing to BS EN 61010-1:2010, IEC 61010-1:2010, UL 61010-1:2010 and CAN/CSA C22.2 Bo 61010-1:2010 and issued certification of compliance to these standards.

Signed for and behalf of:
Watson Marlow Ltd
Falmouth, November 2019

Simon Nicholson, Managing Director, Watson-Marlow Limited

2 Declaration of incorporation



Watson-Marlow Ltd
Falmouth
Cornwall
TR11 4RU
England

Declaration of Incorporation

In accordance with the Machinery Directive 2006/42/EC that if this unit is to be installed into a machine or is to be assembled with other machines for installations, it shall not be put into service until the relevant machinery has been declared in conformity.

We hereby declare that:

Peristaltic Pump

Series: 530, 630 and 730 cased pumps

the following harmonised standards have been applied and fulfilled for health and safety requirements:

Safety of Machinery – EN ISO 12100

Safety of Machinery – Electrical Equipment of Machines BS EN 60204-1

Quality Management System – ISO 9001

and the technical documentation is compiled in accordance with Annex VII(B) of the Directive.

We undertake to transmit, in response to a reasoned request by the appropriate national authorities, relevant information on the partly completed machinery identified above. The method of transmission shall be by mail or email.

The pump head is incomplete and must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the provisions of the Directive.

Person authorised to compile the technical documents:

A handwritten signature in black ink, appearing to read 'N. Ashburn'.

Nancy Ashburn, Head of Design & Engineering, Watson-Marlow Ltd

Place and date of declaration: Watson-Marlow Ltd, 20.04.2020

Responsible person:

A handwritten signature in black ink, appearing to read 'S. Nicholson'.

Simon Nicholson, Managing Director, Watson-Marlow Ltd

3 When you unpack your pump

3.1 Unpacking your pump

Unpack all parts carefully, retaining the packaging until you are sure all components are present and in good order. Check against the components supplied list, below.

3.2 Packaging disposal

Dispose of packaging materials safely, and in accordance with regulations in your area. The outer carton is made of corrugated cardboard and can be recycled.

3.3 Inspection

Check that all components are present. Inspect components for damage in transit. If anything is missing or damaged, contact your distributor immediately.

3.4 Components supplied

630 Components

- 630 pump drive unit, fitted with 620R or other pumphead if specified as a pump
- The designated power cable (attached to the pump drive unit)
- A 630N module providing pump ingress protection to IP66, NEMA 4X. if a EnN.
- **Note:** the module is attached for transit, but must be removed to allow wiring up, voltage selection and fuse inspection and then re-affixed before the pump is operated.
- Product safety information booklet incorporating quick start manual

3.5 Storage

This product has an extended shelf life. However, care should be taken after storage to ensure that all parts function correctly. Please observe the storage recommendations and use-by dates which apply to tubing you may wish to bring into service after storage.

4 Information for returning pumps

Before returning products, they must be thoroughly cleaned/decontaminated. The declaration confirming this should be completed and returned to us in advance of the item being shipped.

You are required to complete and return a decontamination declaration stating all fluids that have been in contact with the equipment being returned to us.

On receipt of the declaration, we will issue a Returns Authorisation Number. We reserve the right to quarantine or refuse any equipment that is not displaying a Returns Authorisation Number.

Please complete a separate decontamination certificate for each product and use the correct form that denotes the location you wish to return the equipment to. If you have any queries then please contact us for further assistance.

5 Peristaltic pumps - an overview

Peristaltic pumps are the simplest possible pump, with no valves, seals or glands to clog or corrode. The fluid contacts only the bore of a tube, eliminating the risk of the pump contaminating the fluid, or the fluid contaminating the pump. Peristaltic pumps can operate dry without risk.

How they work

A compressible tube is squeezed between a roller and a track on an arc of a circle, creating a seal at the point of contact. As the roller advances along the tube, the seal also advances. After the roller has passed, the tube returns to its original shape, creating a partial vacuum which is filled by fluid drawn from the inlet port.

Before the roller reaches the end of the track, a second roller compresses the tube at the start of the track, isolating a packet of fluid between the compression points. As the first roller leaves the track, the second continues to advance, expelling the packet of fluid through the pump's discharge port. At the same time, a new partial vacuum is created behind the second roller into which more fluid is drawn from the inlet port.

Backflow and siphoning do not occur, and the pump effectively seals the tube when it is inactive. No valves are needed.

The principle may be demonstrated by squeezing a soft tube between thumb and finger and sliding it along: fluid is expelled from one end of the tube while more is drawn in at the other.

Animal digestive tracts function in a similar way.

Suitable applications

Peristaltic pumping is ideal for most fluids, including viscous, shear-sensitive, corrosive and abrasive fluids, and those containing suspended solids. They are especially useful for pumping operations where hygiene is important.

Peristaltic pumps operate on the positive displacement principle. They are particularly suitable for metering, dosing and dispensing applications. Pumps are easy to install, simple to operate and inexpensive to maintain.

6 Warranty

Watson-Marlow Ltd ("Watson-Marlow") warrants this product to be free from defects in materials and workmanship for five years from the date of shipment, under normal use and service.

Watson-Marlow's sole responsibility and the customer's exclusive remedy for any claim arising out of the purchase of any product from Watson-Marlow is, at Watson-Marlow's option: repair, replacement or credit, where applicable.

Unless otherwise agreed in writing, the foregoing warranty is limited to the country in which the product is sold.

No employee, agent or representative of Watson-Marlow has the authority to bind Watson-Marlow to any warranty other than the foregoing unless in writing and signed by a director of Watson-Marlow. Watson-Marlow makes no warranty of the fitness of its products for a particular purpose.

In no event:

- i. shall the cost of the customer's exclusive remedy exceed the purchase price of the product;
- ii. shall Watson-Marlow be liable for any special, indirect, incidental, consequential, or exemplary damages, however arising, even if Watson-Marlow has been advised of the possibility of such damages.

Watson-Marlow shall not be liable for any loss, damage, or expense directly or indirectly related to or arising out of the use of its products, including damage or injury caused to other products, machinery, buildings, or property. Watson-Marlow shall not be liable for consequential damages, including without limitation, lost profits, loss of time, inconvenience, loss of product pumped, and loss of production.

This warranty does not obligate Watson-Marlow to bear any costs of removal, installation, transportation, or other charges which may arise in connection with a warranty claim.

Watson-Marlow shall not be responsible for shipping damage of returned items.

Conditions

- Products must be returned by pre-arrangement to Watson-Marlow, or a Watson-Marlow approved service centre.
- All repairs or modifications must have been made by Watson-Marlow Ltd, or a Watson-Marlow approved service centre or with the express permission in writing of Watson-Marlow, signed by a manager or director of Watson-Marlow.
- Any remote control or system connections must be made in accordance to Watson-Marlow recommendations.
- All PROFIBUS systems must be installed or certified by a PROFIBUS approved installation engineer.
- All EtherNet/IP™ systems must be installed or certified by a suitably trained installation engineer.

Exceptions

- Consumable items including tubing and pumping elements are excluded.
- Pumphead rollers are excluded.
- Repairs or service necessitated by normal wear and tear or by lack of reasonable and proper maintenance are excluded.
- Products which, in the judgement of Watson-Marlow, have been abused, misused, or subject to malicious or accidental damage or neglect are excluded.
- Failure caused by electrical surge is excluded.
- Failure caused by incorrect or sub-standard system wiring is excluded.
- Damage by chemical attack is excluded.
- Ancillaries such as leak detectors are excluded.
- Failure caused by UV light or direct sunlight.
- Any attempt to disassemble a Watson-Marlow product will invalidate the product warranty.

Watson-Marlow reserves the right to amend these terms and conditions at any time.

7 Safety notes

This safety information should be used in conjunction with the rest of this operating manual.

In the interests of safety, this pump and pumphead should only be used by competent, suitably trained personnel after they have read and understood the manual and considered any hazard involved. If the pump is used in a manner not specified by Watson-Marlow Ltd, the protection provided by the pump may be impaired. Any person who is involved in the installation or maintenance of this equipment should be fully competent to carry out the work. This person should also be familiar with all relevant health and safety protocols, regulations and guidance.



This symbol, used on the pump and in the manual, means: An appropriate safety instruction should be followed or caution to a potential hazard exists..



This symbol, used on the pump and in the manual, means: Do not allow fingers to contact moving parts.



This symbol, used on the pump and in the manual, means: Caution, hot surface.



This symbol, used on the pump and in the manual, means: Caution, risk of electric shock.



This symbol, used on the pump and in the manual, means: Personal Protective Equipment (PPE) must be worn.



This symbol, used on the pump and in the manual, means: Recycle this product under the terms of the EU Waste Electrical and Electronic Equipment (WEEE) Directive.



Within the 630 and 730 pumps there are thermal fuses which self-reset; if they trip, error code "Err17 Under Voltage" is displayed.



Fundamental work with regard to lifting, transportation, installation, starting-up, maintenance and repair should be performed by qualified personnel only. The unit must be isolated from mains power while work is being carried out. The motor must be secured against accidental start-up.



Some pumps weigh more than 18kg (the exact weight depends on the model and pumphead - see on the pump). Lifting should be performed according to standard Health and Safety guidelines. Finger recesses are built into the sides of the lower shell for convenience in lifting; in addition, the pump can conveniently be lifted by grasping the pumphead and (where fitted) the 'N' module at the rear of the pump.



There is a user-replaceable fuse located at the rear of the pump. Some country specific mains plugs contain an additional replaceable fuse. Fuses must be replaced with parts with the same rating.



There are no user-serviceable fuses or parts inside this pump.

Note - the mains power supply cable is supplied hardwired into the pump and is not customer replaceable.

Observe voltage selector switch setting for your region



IP66 pumps are supplied with a mains plug. The gland at the NEMA Module end of the cable is IP66 rated. The mains plug at the opposite end of the cable is NOT IP66 rated. It is the user's responsibility to ensure that the connection to the mains supply is IP66 rated.

This pump must be used only for its intended purpose.

The pump must be accessible at all times to facilitate operation and maintenance. Access points must not be obstructed or blocked. Do not fit any devices to the drive unit other than those tested and approved by Watson-Marlow. Doing so could lead to injury to persons or damage to property for which no liability can be accepted.

The pump's main plug is the disconnecting device (for isolating the motor drive from the mains supply in an emergency). Do not position the pump so that it is difficult to disconnect the mains plug.



If hazardous fluids are to be pumped, safety procedures specific to the particular fluid and application must be put in place to protect against injury to persons.



This product does not comply with the ATEX directive and must not be used in explosive atmospheres.



Ensure the chemicals to be pumped are compatible with the pumphead, lubricant (where applicable), tubing, pipework and fittings to be used with the pump. Please refer to the chemical compatibility guide which can be found at: www.wmftg.com/chemical. If you need to use the pump with any other chemical please contact Watson-Marlow to confirm compatibility.



There are moving parts inside the pumphead. Before opening the tool-unlockable guard or tool-unlockable track, ensure that the following safety directions are followed:



1. Ensure the pump is isolated from the mains power.

2. Ensure that there is no pressure in the pipeline.



3. If a tube failure has occurred, ensure that any fluid in the pumphead has been allowed to drain to a suitable vessel, container or drain.


4. Ensure that appropriate Personal Protective Equipment (PPE) is worn.



Primary operator protection from rotating parts of the pump is provided by the pumphead safeguard. Note that safeguards differ, depending on the type of pumphead. See the pumphead section of the manual.

8 Pump specifications

8.1 Specification ratings

Operating temperature	5C to 40C (41F to 104F)
Storage temperature	630: -25C to 65C (-13F to 149F)
Humidity (non-condensing)	80% up to 31C (88F) decreasing linearly to 50% at 40C (104F)
Maximum altitude	2000m (6560ft)
Power Rating	630: 250VA
Supply voltage	100-120V/200-240V 50/60Hz 1pH (Subject to regional cord sets and supply)
Maximum voltage fluctuation	+/-10% of nominal voltage. A well regulated electrical mains supply is required along with cable connections conforming to the best practice of noise immunity.
Full load current	630: <1.1A @ 230V; <2.2A @ 115V
Fuse rating	T2.5AH250V (5x20mm)
Installation category (overvoltage category)	II
Pollution degree	2
IP	630: IP31 to BS EN 60529, if supplied with N module then IP66 to BS EN 60529. Equivalent to NEMA 4X to NEMA 250 *(indoor use - protect from prolonged UV exposure)
dB rating 	630: < 70dB (A) @ 1m
Control ratio	630: 0.1-265rpm (2650:1)
Maximum speed	630: 265rpm

8.2 Weights

630	Drive only		+ 620R, 620RE		+ 620RE4		+ 620L, 620LG	
IP31	16.5kg	36lb 6oz	19.6kg	43lb 3oz	20.1kg	44lb 5oz	24.3kg	53lb 9oz
IP66	17.4kg	38lb 8oz	20.5kg	45lb 3oz	21.0kg	46lb 5oz	25.2kg	55lb 9oz



Some pumps weigh more than 18kg (the exact weight depends on the model and pumphead - see on the pump). Lifting should be performed according to standard Health and Safety guidelines. Finger recesses are built into the sides of the lower shell for convenience in lifting; in addition, the pump can conveniently be lifted by grasping the pumphead and (where fitted) the module at the rear of the pump.

8.3 Pumphead options

630 pump range

620R, 620RE, 620L:



9 Good pump installation practice

9.1 General recommendations

It is recommended that the pump is sited on a flat, horizontal, rigid surface, free from excessive vibration, to ensure the correct lubrication of the gearbox and correct pumphead operation. Allow a free flow of air around the pump to ensure that heat can be dissipated. Ensure that the ambient temperature around the pump does not exceed the recommended maximum operating temperature.

The STOP key on pumps supplied with a keypad will always stop the pump. However, it is recommended that a suitable local emergency stop device is fitted into the mains supply to the pump.

Do not stack the pumps more than the recommended maximum number. When the pumps are stacked, ensure that the ambient temperature around all the pumps in the stack does not exceed the recommended maximum operating temperature.



The pump may be set up so that the direction of rotor rotation is clockwise or counter-clockwise, whichever is convenient.

Please note, however, that for some pumpheads the tube life will be greater if the rotor rotates clockwise; and that performance against pressure will be maximised if the rotor rotates counter-clockwise. To achieve pressure in some pumpheads the pump must rotate counter-clockwise.



Peristaltic pumps are self-priming and self-sealing against backflow. No valves are required in inlet or discharge line, except those specified as below.



Users must fit a non-return valve between the pump and the discharge pipework to avoid the sudden release of pressurised fluid in the event of a pumphead or tube failure. This shall be fitted immediately after the discharge of the pump.

Valves in the process flow must be opened before the pump operates. Users are advised to fit a pressure relief device between the pump and any valve on the discharge side of the pump to protect against damage caused by accidental operation with the discharge valve closed.

9.2 Dos and don'ts

- Do not build a pump into a tight location without adequate airflow around the pump.
- Do keep delivery and suction tubes as short and direct as possible - though ideally not shorter than one metre - and follow the straightest route. Use bends of large radius: at least four times the tubing diameter. Ensure that connecting pipework and fittings are suitably rated to handle the predicted pipeline pressure. Avoid pipe reducers and lengths of smaller bore tubing than the pumphead section, particularly in pipelines on the suction side. Any valves in the pipeline must not restrict the flow. Any valves in the flow line must be open when the pump is running.
- Do ensure that on longer tube runs at least one metre of smooth bore, flexible tubing is connected to the inlet and discharge port of the pumphead to help to minimise impulse losses and pulsation in the pipeline. This is especially important with viscous fluids and when connecting to rigid pipework.
- Do use suction and delivery pipes equal to or larger than the tubing diameter bore. When pumping viscous fluids use pipe runs with a bore several times larger than the pump tube.
- Do site the pump at or just below the level of the fluid to be pumped if possible. This will ensure flooded suction and maximum pumping efficiency.
- Do run at slow speed when pumping viscous fluids. Flooded suction will enhance pumping performance, particularly for materials of a viscous nature.
- Do recalibrate after changing tubing, fluid or any connecting pipework. It is also recommended that the pump is recalibrated periodically to maintain accuracy.
- Do not pump any chemical not compatible with the tube or pumphead.
- Do not run the pump with no tube or element fitted to the pumphead.
- Do not strap the control and mains cables together.
- Do ensure if your product has an N module, that the module is fitted with the seals intact and properly located. Ensure that the holes for the cable glands are properly sealed to maintain the IP/NEMA rating.

Tube selection: The chemical compatibility guide published on the Watson Marlow website is for guidance. If in any doubt about the compatibility of a tube material and the duty fluid, request a Watson-Marlow tube sample card for immersion trials.

When using Marprene or Bioprene continuous tubing, do re-tension the tube after the first 30 minutes of running.

10 Pump operation

10.1 Keypad Layout and Key IDs



HOME key

When the HOME key is pressed it will return the user to the last known operating mode. If modifying pump settings when the HOME key is pressed, it will disregard any setting changes and return you to the last known operating mode.

FUNCTION keys

FUNCTION keys, when pressed, will perform the function displayed on the screen directly above the relevant function key.

▲ and ▼ keys

These keys are used to change the programmable values within the pump. These keys are also used to move the selection bar up and down in the menus.

MODE key

To change modes or mode settings, press the MODE key. The MODE key can be pressed at any time to enter the mode menu. If modifying pump settings when the MODE key is pressed, it will disregard any setting changes and return you to the MODE menu.

10.2 Starting and stopping





10.3 Using up and down keys



10.4 Maximum speed



10.5 Change rotation direction

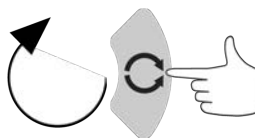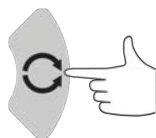

11 Connecting to a power supply

A well regulated electrical mains supply is required along with cable connections conforming to the best practice of noise immunity. It is not recommended to site these drives alongside electrical devices that may generate mains-borne noise, for example 3-phase contactors and inductive heaters.



Set the voltage selector to 115V for 100-120V 50/60Hz supplies or 230V for 200-240V 50/60Hz supplies. Always check the voltage selector switch before connecting to the mains supply or the pump will be damaged.

~100-120V



~200-240V



Make suitable connection to an earthed single-phase mains electricity supply.



If the pump type is one with an 'N' module, the voltage selector is not visible while the module is in place. It is mounted in the switch plate at the rear of the pump, protected from water by the 'N' module. The module must be removed to allow access to the switch plate. Do not switch the pump on unless you have checked that it is set to suit your power supply by removing the module and inspecting the switch and then refitting the module.



1.



2.



3.



4.



We recommend using a commercially available supply voltage surge suppression where there is excessive electrical noise.



Ensure that all power supply cables are adequately rated for the equipment. Only use with supplied power cable.



The pump must be positioned so that the disconnection device is easily accessible when the equipment is in use.



IP66 pumps are supplied with a mains plug. The gland at the NEMA Module end of the cable is IP66 rated. The mains plug at the opposite end of the cable is NOT IP66 rated. It is your responsibility to ensure that the connection to the mains supply is IP66 rated.

11.1 Conductor colour coding

Conductor type	European colour	North American colour
Line	Brown	Black
Neutral	Blue	White
Ground	Green/Yellow	Green

11.2 Wiring the NEMA module

EtherNet/IP™ pumps

The NEMA 4X modules fitted to 530, 630 and 730 En cased pumps have two pairs of wiring ports. Two M16 ports are provided, together with glands to seal circular cross-section cables ranging in diameter from 4mm to 10mm (5/32in to 13/32in). EtherNet connection is via the two M12 connectors mounted to the rear of the NEMA module.

11.3 Earth screening of control cables on NEMA module

①



②



11.4 Ethernet M12 connector screen connection

1. By default the body and cable screen of the M12 Ethernet connectors are insulated from the metal body of the NEMA module and mains ground. This is in accordance to The EtherNet/IP™ specification for use in industrial automation systems using EtherNet/IP™.
2. If there is a requirement to connect the M12 body and cable screen (A) to Mains earth for EMC or Ethernet TCP reasons then the default plastic M12 mounting collar (MN2934T) can be replaced by a stainless steel version (MN2935T). Ensure the M12 O-ring and sealing washer are seated correctly to maintain IP66 sealing.



12 Start-up check list

Note: See also "Tube replacement " on page 112.

- Ensure that proper connections are achieved between the pump and suction and discharge piping.
- Ensure proper connection has been made to a suitable power supply.
- Ensure that the recommendations in the section "Good pump installation practice " on page 15 are followed.

13 Control wiring



Never apply mains power to the D-connectors. Apply the correct signals to the pins shown. Limit signals to the maximum values shown. Do not apply voltage across other pins. Permanent damage, not covered by warranty, may result.



Keep 4-20mA and low voltage signals separate from mains power. Use separate glanded input cables. Following best EMC practice and use of shielded glands is recommended.

13.1 Pump external interface parameters

Parameter	Limits				Units	Comment
	Sym	Min	Nom	Max		
Digital input voltage high	VD_{IH}	5		24	V	Leak, Stop, Pressure, Frequency
Digital input voltage low	VD_{IL}	0		0.8	V	Leak, Stop, Pressure, Frequency
Digital input voltage absolute maximum	VD_{in}	-30		30	V	Non operational
Digital input resistance	RD_{in}	10		110	k Ω	110K for $\leq 5V$
Frequency range	F_{max}	1		1000	Hz	Flow sensor use
Analogue input, voltage mode	VA_{in}	-15	10	30	V	0-10V range (100R source impedance)
Analogue input, voltage mode	RVA_{in}		34.4		k Ω	$\pm 3\%$
Analogue input measurement range	I_{in}	0		25	mA	
Analogue input current absolute maximum	IA_{in}	-50		28	mA	Dissipation limit
Analogue input voltage absolute maximum	VA_{in}	0		7.0	V	Dissipation limit
Analogue input resistance	RI_{IN}		250	270	Ω	250R Sense Res.
Analogue input filter bandwidth	BW		67		Hz	-6dB Bandwidth
22V supply output	V_{aux}		18	30	V	Un-regulated
24V isolated supply output	V24		24			
22V/24V supply load current				80	mA	Self-resetting fuse

13.2 Features on the rear of the pump




1	RJ45 connection 1
2	RJ45 connection 2
3	Standard - 9 way D - Sensor connector (Female)
4	USB (Type A) port for service use only
5	Voltage selector switch
6	On/Off switch
7	Mains power cable
8	Customer replaceable fuse

13.3 IP31 Wiring connections

RJ45 connections

Connect an RJ45 (CAT5 or above, shielded recommended) network cable from the PC to the pump connection port 1 or 2.

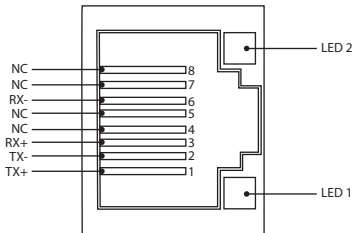


LED 1	LED 2	Indication
Low	Low	Off
Low	High	Yellow LED on for link detected, flickers to indicate 10 Mbit activity
High	Low	One green LED on for link detected, flickers to indicate 100 Mbit activity
High	High	Two green LEDs on for link detected, flickers to indicate 1Gbit activity

13.4 Sensor Wiring - IP31

Standard - 9 way D - Sensor connector (Female/Chassis Skt)

Recommended control cable: 7/0.2mm 24AWG screened, circular. The cable screen should be earthed with a 360 deg connection to a conductive back-shell.

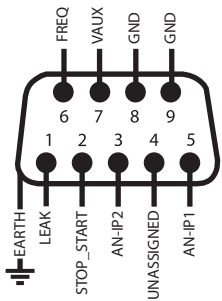

Wiring the 9 way D sensor connector

Key to symbols



Run



Input



Keypad direction change



Stop



Output



Dry (no leak)



Clockwise rotation



Manual (keypad) control



Wet (leak detected)






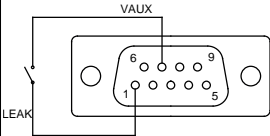
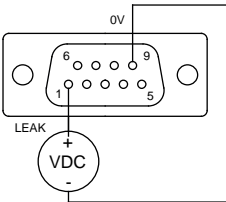

Anticlockwise rotation





Analogue

Wiring the D connector

Signal Name	Input or output	Configurable	Signal response
	Input	Yes	
	Input	Yes	

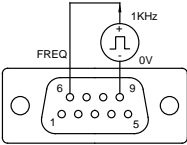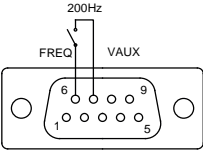Signal Name	Input or output	Configurable	Signal response
 	Input	Yes	
 	Input	Yes	

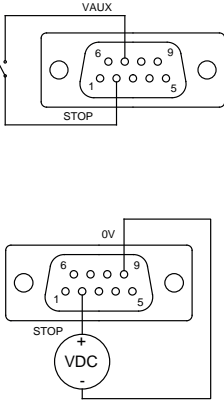Signal Name	Input or output	Configurable	Signal response
	Input	Yes	

13.5 IP66 Wiring - N Module




The recommended cable and cable glands must be used for the IP66 (NEMA 4X) version of the pump; otherwise ingress protection may be impaired.



Ensure that the module cover is correctly secured at all times by all screws supplied. Failure to do so may compromise the IP66 (NEMA 4X) protection.



Ensure that unused openings on the module are sealed using the blanking plugs provided. Failure to do so may compromise the IP66 (NEMA 4X) protection.

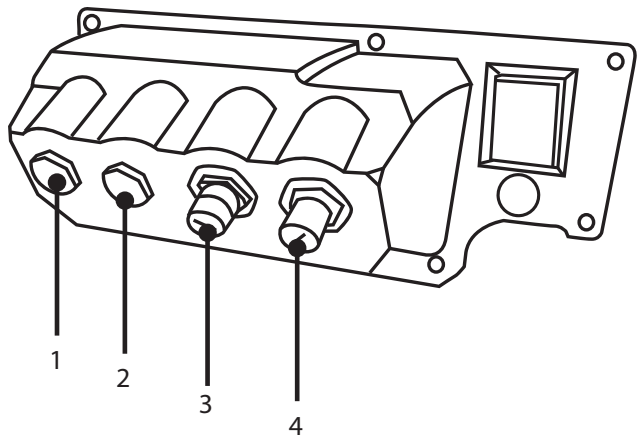


1	M16 port	3	M12 Connector - Ethernet connection
2	M16 port	4	M12 Connector - Ethernet connection


Ethernet connection

There are two communication connectors on the rear of the N Module for Ethernet connection (3,4). Both connectors have the same pin configuration. The pin configuration and the signal response is shown below.

Plugs and cables for these connectors should be: M12, male, 4-Pin D coded, shielded.

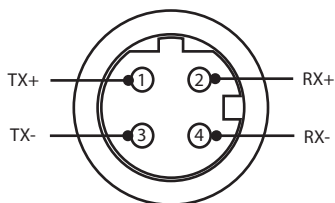

Adapter PCB

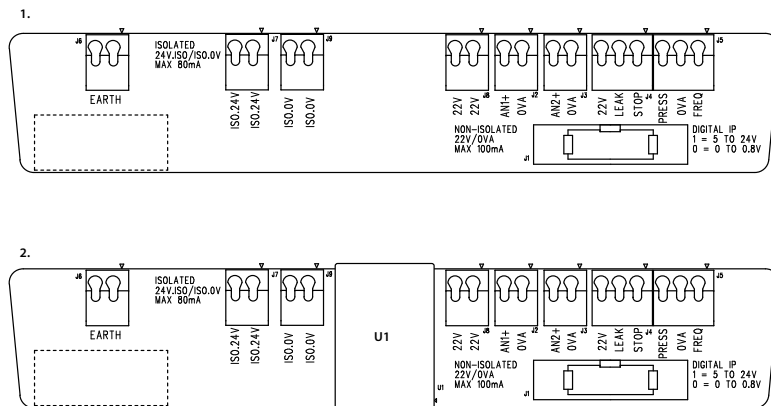

1. Without isolated power supply option (N Module) 2. With isolated power supply option (F Module)

Note: Disconnect the adapter module by use of the ribbon eject levers. It is recommended to leave the 9W connector permanently attached to the pump.


Recommended control cable: metric = 0.05sq mm - 1.31sq mm solid and stranded. USA = 30AWG - 16AWG solid stranded. Cable: circular. Max/min outside diameter to ensure a seal when passed through the standard gland: 9.5mm-5mm. **The cable section must be circular to ensure a seal.**

Power supply options


The NEMA terminal board is available with an isolated power supply option. This has a 24V isolated power supply (maximum output load 80mA), U1, fitted. As shown below, U1 completely separates the terminal 24V and 0V from the pump internal supplies.

This may be used if the sensor requires an isolated supply or has a 4-20mA output which cannot be used with the ground connected load resistor within the pump.

1.

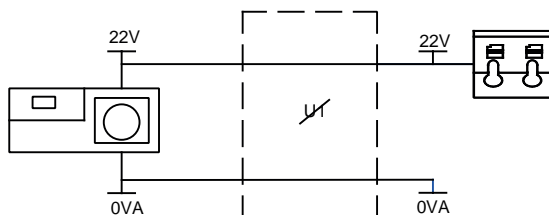

2.

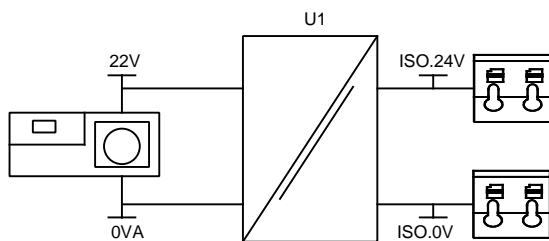

1. Without isolated power supply option (N Module) 2. With isolated power supply option (F Module)

13.6 Input/output connectors - IP66

Key to symbols



Run



Input



Keypad direction change



Stop



Output



Dry (no leak)



Clockwise rotation



Manual (keypad) control



Wet (leak detected)













Anticlockwise rotation



Analogue


Standard N Module: Input/output Connectors

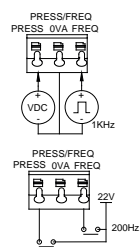Connector No.	Function	Input or output	Configurable	Signal response
J1			No	Connection to pump
J2	 AN1+P 0VA ANALOGUE 1	Input	Yes	 ANALOGUE #1 0-10V/ 4-20mA [34K/ 250R]
J3	 AN2+P 0VA ANALOGUE 2	Input	Yes	 ANALOGUE #2 0-10V/ 4-20mA [34K/ 250R]

Connector No.	Function	Input or output	Configurable	Signal response
J4		Input	Yes	<div> <p>START STOP</p> <p>  0  1 [5-24V]  </p> </div> <div> <p>LEAK</p> <p>  0  1 [5-24V]  </p> </div>
J5		Input	Yes	<div> <p>FREQ</p> <p>   5V-24V 1mA </p> </div>
J6	<p>1. Earth</p> <p>2. Earth</p>		No	

13.7 Network topology

Star network

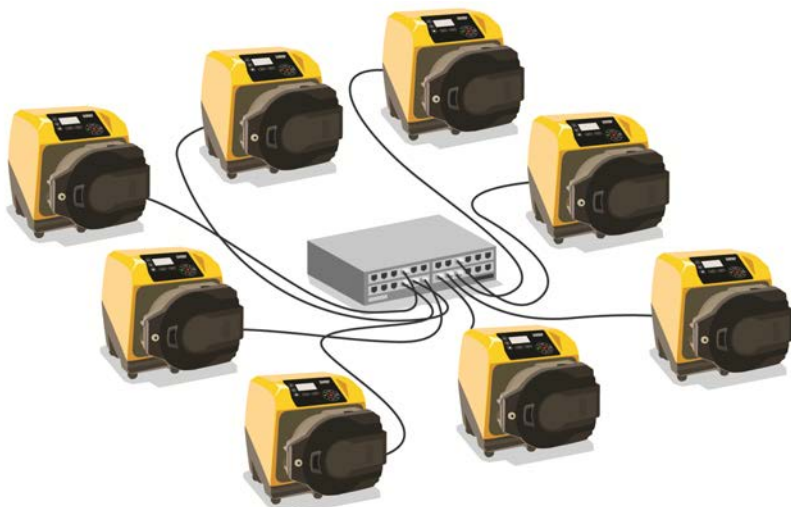

Ring network



14 Switching the pump on for the first time

Power up the pump. The pump displays the start-up screen with the Watson-Marlow Pumps logo for three seconds.



14.1 Selecting the display language

1. Use the \wedge/\vee keys to select your chosen language, and press **SELECT**.



2. Your selected language will now be displayed on screen. Choose **CONFIRM** to continue. All text will now appear in your chosen language.



3. Choose **REJECT** to return to the language choice screen. This then proceeds to the home screen.



14.2 First-time start-up defaults

The pump is preset with operational parameters as shown in table below.

Parameter	630 default
Language	Not set
Default mode	Manual
Default manual speed	165rpm
Pump status	Stopped
Max speed	265rpm
Direction	CW
Pumphead	620R
Tube size	15.9mm
Tube material	Bioprene
Flow calibration	0.061 l/rev
Flow units	rpm
SG value	1
Keypad lock	Disabled
Beeper	ON
Security code	Not set
Remote start/stop input	High = stop
Leak detector input	High = leak

The pump is now ready to operate according to the defaults listed above.

Note: The display background colour changes according to running state as follows:

- White background indicates pump stopped
- Grey background indicates pump running
- Red background indicates error or alarm

All operating parameters may be changed by means of key-presses (see section "Pump operation " on page 17).

15 Switching the pump on in subsequent power cycles

Subsequent power-up sequences will jump from the start-up screen to the home screen.

- The pump runs a power-on test to confirm proper functioning of the memory and hardware. If a fault is found, an error code is displayed.
- The pump displays the start-up screen with the Watson-Marlow Pumps logo for three seconds followed by the home screen
- Start-up defaults are those in place when the pump was switched off last

Check that the pump is set to operate as you require it. The pump is now ready to operate.

All operating parameters may be changed by means of key-presses (see "Pump operation " on page 17).

Power interruption

This pump has an auto restart feature (which only affects manual mode) which, when active, will restore the pump to the operating state it was in when power was lost.

Stop/start power cycles

Do not power up/power down the pump more than 12 times in 24 hours, whether manually or by means of the auto-restart facility (which only affects manual mode). We recommend remote control where a high frequency of power cycles is required.

16 Mode menu

Press **MODE** to display the Change mode menu.

Use the \wedge and \vee keys to scroll through the available modes.

- Manual(default)
- Flow calibration
- EtherNet/IP™
- CANCEL



Use **SELECT** to choose mode. Use the right hand function key to alter mode settings.

17 Manual

All settings and functions of the pump in manual mode are set and controlled by means of key-presses. Immediately after the start-up sequence detailed in: "Switching the pump on in subsequent power cycles " on page 39, the manual mode home screen will be displayed unless auto restart is enabled.

Auto restart is a feature which only affects pump operation when the pump is set to manual mode. If Auto Restart is enabled the pump will return to the last known settings from that operating mode when the power is re-applied. When the pump is running it displays an animated clockwise arrow. In normal operation, the direction of flow is into the bottom port of the pumphead and out of the top port.

If an exclamation mark (!) is displayed, it indicates that the pump could automatically restart at any time. In manual mode the 'Auto restart' behaviour is configurable. If a padlock icon shows, it indicates that the keypad lock is on.

17.1 START



Starts the pump at the current flow displayed, and the display background changes to grey. If the pump is already running, pressing this has no effect.

17.2 STOP



Stops the pump. The display background changes to white. If the pump is not running pressing this has no effect.

17.3 INCREASING AND DECREASING FLOW RATE



Using the \wedge and \vee keys will increase or decrease the flow rate.

Decreasing flow rate

- A single key press will decrease flow rate by the least significant digit of the chosen flow rate unit.
- Repeat key presses as required to achieve the desired flow rate.
- Hold down the key for flow rate scrolling.

Increasing flow rate

- A single key press will increase flow rate by the least significant digit of the chosen flow rate unit.
- Repeat key presses as required to achieve the desired flow rate.
- Hold down the key for flow rate scrolling.

17.4 MAX FUNCTION (Manual mode only)



- Press and hold the **MAX** key to run at maximum flow.
- Release the key to stop the pump.
- The volume dispensed and time elapsed are displayed while the **MAX** key is pressed and held.

18 Flow calibration

This pump displays flow rate in ml/min.

18.1 Setting the flow calibration

Using the \wedge / \vee keys, scroll to **Flow calibration** and press **CALIBRATE**.



Using the \wedge / \vee keys, enter the maximum flow rate limit and press **ENTER**.



Press **START** to begin pumping a volume of fluid for calibration.



Press **STOP** to stop pumping fluid for the calibration.



Use the \wedge/\vee keys to enter the actual volume of fluid pumped.



To accept the new calibration press **ACCEPT** or **RE-CALIBRATE** to repeat the procedure. Press **HOME** or **MODE** to abort.



The pump is now calibrated.

19 EtherNet/IP™ mode

19.1 Configure EtherNet/IP™ Settings

Configure the settings to suit your network. The following is an example of a static IP address:

Setting	Value
DHCP Enable	Off
IP Address	192.168.001.012
Subnet mask	255.255.255.000
Gateway address	192.168.001.001



1. Press the 'MODE' key to access the MODE menu.



2. Press the down arrow key until 'EtherNet/IP' is highlighted.
3. Press the 'SETTINGS' key to access the ETHERNET/IP SETTINGS menu.

Setting DHCP Enable



4. Press the 'DISABLE' soft key to set 'DHCP Enable' to 'Off'.

Setting the IP Address, Subnet mask and Gateway address

Configure each of the IP Address, subnet mask and gateway address in turn using the following method:



5. Use the UP and DOWN arrow keys to select the setting to configure
6. Press 'SET' to enter the SET ADDRESS menu



7. Use the UP and DOWN arrow keys to set the first number. Hold the UP or DOWN key increase the scrolling speed.
8. Press 'NEXT' to move to the next number



9. After setting the last number, press 'CONFIRM' to store the number and return to the 'ETHERNET/IP SETTINGS' screen.
10. Press BACK to return to the MODE menu

19.2 EtherNet/IP™ mode



1. From the MODE menu, highlight EtherNet/IP and press SELECT to use EtherNet/IP™ Mode.




2. The pump display will show a network error as indicated above if the pump is not connected to a PC.

19.3 Example for http connection between pump and PC (peer-to-peer)

Refer to "Configure EtherNet/IP™ Settings" on page 45 to set your pump to the following IP Configuration.

- IP Address: 192.168.1.12
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.1

19.4 Setting up the PC

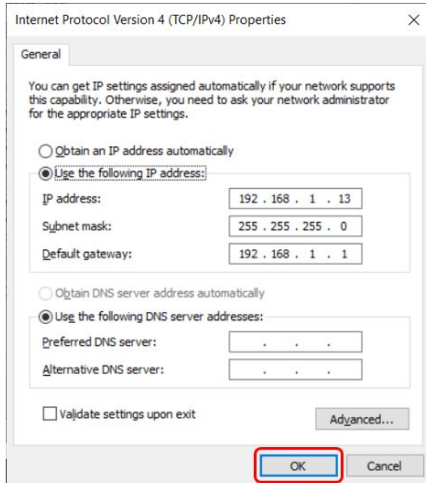


In the 'Internet Protocol Version 4 (TCP/IPv4) Properties' window, select the 'Use the following IP address' button and inputting the below network settings. Press OK once done. This can be found in the "Network Connections" window by right clicking on the "Ethernet" connection and going to properties .

Set as follows:

- IP Address: 192.168.1.13
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.1

Select 'OK' (outlined in red), then close all open windows.

19.5 Connecting the PC to the pump

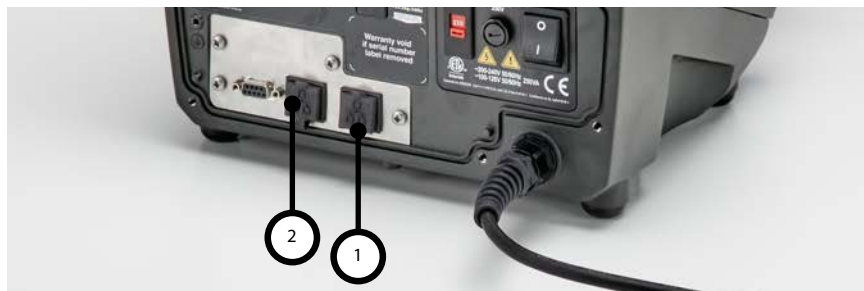

1. Connect a standard RJ45 network cable from the PC to the pump into either RJ45 connector (1,2).



2. The 'Connected' and 'Port 1 Connected' or 'Port 2 Connected' indicators will turn green, followed by the 'IP Address'. The pump will then enter EtherNet/IP™ mode.



3. The colour of the 'E' network symbol is red when disconnected and black when connected

19.6 Connecting using the web browser

Now that the pump is connected to the PC, the web browser can be opened.

How does the web browser work?

- The web browser is a window to view content
- In the case of the internet, content is downloaded from websites using HTML
- In the case of the pump, HTML is stored internally

How to use the web browser

- Launch web browser (e.g. Internet Explorer®)
- Type 192.168.1.12 into the address bar. The pump web page will open displaying the 'Overview' tab.

19.7 Connecting to a PLC

This pump is designed in accordance to the EtherNet/IP™ specification for use with any PLC system using EtherNet/IP™.

Automatic configuration by installing the EDS File (Rockwell add on profile)

Downloading the EDS file

The EDS file is available for download from the WMFTG website.

- Navigate to the WMFTG website.
- Navigate to the 'Literature' page by clicking the link on the home page.
- Type 'EDS' in the search filter and click search.

Manual configuration

Assem100

T->0

Param No.	Signal	Byte Offset	Type
13	FlowCal	0	U32
14	RunHours	4	U32
15	SensorFlowRate	8	U32
16	SensorPressure	12	U32
17	PressureLo-HiWarningSp	16	U32
18	PressureHi-LoWarningSp	20	U32
19	PressureLo-LoAlarmSp	24	U32
20	PressureHi-HiAlarmSp	28	U32
21	FlowSensorLo-HiWarningSp	32	U32
22	FlowSensorHi-LoWarningSp	36	U32
23	FlowSensorLo-LoAlarmSp	40	U32
24	FlowSensorHi-HiAlarmSp	44	U32
25	FlowTotaliser	48	U32
26	RevolutionCount	52	U32
27	PumpSpeed	56	U16
28	SpeedLimit	58	U16
29	GeneralAlarm	60	U16
30	PumpVersionMajor	62	U8
31	PumpVersionMinor	63	U8
32	ASIC-VersionMajor	64	U8

Param No.	Signal	Byte Offset	Type
33	ASIC-VersionMinor	65	U8
34	ASIC-VersionBuild	66	U8
35	WallSize	67	U8
36	BoreSize	68	U8
37	PumpModel	69	U8
38	PumpHead	70	U8
39	PressureSensorModel	71	U8
40	PressureSensorSize	72	U8
41	FlowSensorModel	73	U8
42	FlowSensorSize	74	U8
43	Reverse	75	U8
44	Running	76	BOOL
45	LeakDetected	77	BOOL
46	MotorStallError	78	BOOL
47	MotorSpeedError	79	BOOL
48	OverCurrentError	80	BOOL
49	OverVoltageError	81	BOOL
50	Guard/Interlock	82	BOOL
51	FlowHi-LoActive	83	BOOL
52	FlowLo-LoActive	84	BOOL
53	PressureHi-LoActive	85	BOOL
54	PressureLo-LoActive	86	BOOL
55	FlowHi-HiActive	87	BOOL

Param No.	Signal	Byte Offset	Type
56	FlowLo-HiActive	88	BOOL
57	PressureHi-HiActive	89	BOOL
58	PressureLo-HiActive	90	BOOL
59	SensorErrorInput1	91	BOOL
60	SensorErrorInput2	92	BOOL
61	EthernetIpMode	93	BOOL
62	EthernetIpActive	94	BOOL

Assem150

O->T

Param No.	Signal	Offset	Type
1	SetFlowCal	0	U32
2	SetSpeed	4	U16
3	SetSpeedLimit	6	U16
4	SetFailsafeSpeed	8	U16
5	SetFailsafeEnable	10	U8
6	SetReverse	11	U8
7	Run	12	BOOL
8	RunEnable	13	BOOL
9	ResetRunHours	14	BOOL
10	PauseFlowTotaliser	15	BOOL
11	ResetFlowTotaliser	16	BOOL
12	ResetRevolutionCount	17	BOOL

19.8 Pump parameters

Setting parameters

To set a parameter to a new value:

- Type a value into the field or click on the check box (depending on the parameter type)
- Click 'set' to store the new value or click 'refresh' to cancel the change
- Up to 10 parameters are displayed per page. Use the < and > buttons to navigate between pages

The following parameters can be set by the user.

Param No.	EDS Values	Read / Write	Default Value (EDS)	Parameter Range	Comments
1	SetFlowCal	Write	15120	1 - 2147483647	Use to set the tube flow calibration value. The flow calibration value is set in μL . For more information on flow calibration see "Flow calibration " on page 43
2	SetSpeed	Write	100	1 - 2200	Speed is set in Deci RPM. Max speed depends on head type. See "PumpHead" on page 63.
3	SetSpeedLimit	Write	2200	1 - 2200	Speed is set in Deci RPM. Max speed depends on head type. See "PumpHead" on page 63.
4	SetFailsafeSpeed	Write	100	1 - 2200	If the failsafe is enabled the pump will run continuously at the selected speed in the event of a communications loss.

Param No.	EDS Values	Read/Write	Default Value (EDS)	Parameter Range	Comments
5	SetFailsafeEnable	Write	0	0-1 (False/True)	Enabled the failsafe speed. If disabled the pump will stop in the event of a communications loss. If enabled the pump will run at the speed set in the "SetFailsafeSpeed" parameter
6	SetReverse	Write	0	0-1 (False/True)	If set the pump will run anti-clockwise. Pump defaults to clockwise rotation
7	Run	Write	0	0-1 (False/True)	Set to 1 (true) to allow the pump to run. 0 will stop the pump. Note that pump enable needs to be set
8	RunEnable	Write	0	0-1 (False/True)	Need to set to 1 to allow pump to run. Setting to 0 will stop the pump and not allow the pump to run.
9	ResetRunHours	Write	0	0-1 (False/True)	Resets the run hours accumulator
10	PauseFlowTotaliser	Write	0	0-1 (False/True)	Set to 1 to pause the internal FlowTotaliser parameter. Setting to 0 will un-pause the parameter
11	ResetFlowTotaliser	Write	0	0-1 (False/True)	Set to 1 to reset the flow totaliser. Set to 0 to allow the flow totaliser to accumulate

Param No.	EDS Values	Read/Write	Default Value (EDS)	Parameter Range	Comments
12	ResetRevolutionCount	Write	0	0-1 (False/True)	Set to 1 to reset the revolution count. Set to 0 to allow the revolution count to increment.

The following parameters are read only.

Param No.	EDS Values	Read/Write	Default Value (EDS)	Parameter Range	Comments
13	FlowCal	Read	1	1 - 2147483647	Reports the Flow calibration value in μ L.
14	RunHours	Read	0	0 - 2147483647	Reports the number of hours the pump has run
15	SensorFlowRate	Read	0	-2147483647 - 2147483647	Reports a value if the flow sensor is setup
16	SensorPressure	Read	0	-2147483647 - 2147483647	Reports a value if the pressure sensor is setup
17	PressureLo-HiWarningSp	Read	1	0 - 2147483647	Displays the Pressure low warning band set point in deci-psi
18	PressureHi-LoWarningSp	Read	1	0 - 2147483647	Displays the Pressure high warning band set point in deci-psi
19	PressureLo-LoAlarmSp	Read	1	0 - 2147483647	Displays the Pressure low alarm band set point in deci-psi
20	PressureHi-HiAlarmSp	Read	1	0 - 2147483647	Displays the Pressure high alarm band set point in deci-psi
21	FlowSensorLo-HiWarningSp	Read	1	0 - 2147483647	Displays the Flow low warning band set point in μ L

Param No.	EDS Values	Read /Write	Default Value (EDS)	Parameter Range	Comments
22	FlowSensorHi-LoWarningSp	Read	1	0 – 2147483647	Displays the Flow high warning band set point in µL
23	FlowSensorLo-LoAlarmSp	Read	1	0 – 2147483647	Displays the Flow low alarm band set point in µL
24	FlowSensorHi-HiAlarmSp	Read	1	0 – 2147483647	Displays the Flow high alarm band set point in µL
25	FlowTotaliser	Read	0	0 – 2147483647	Displays the totalised flow value in deci-ml
26	RevolutionCount	Read	0	0 – 2147483647	Displays the revolution count in full rotations
27	PumpSpeed	Read	100	1 - 2650	Displays the current pump speed set point in deci rpm
28	SpeedLimit	Read	2650	1 - 2650	Displays the current speed limit set point in deci rpm
29	GeneralAlarm	Read	0	0 – 32767	Displays a value corresponding to pump alarms.
30	PumpVersionMajor	Read	0	0 – 127	Pump software version major revision number
31	PumpVersionMinor	Read	0	0 – 127	Pump software version minor revision number
32	ASIC-VersionMajor	Read	0	0 – 127	Ethernet ASIC software version major revision number
33	ASIC-VersionMinor	Read	0	0 – 127	Ethernet ASIC software version minor revision number
34	ASIC-VersionBuild	Read	0	0 – 127	Ethernet ASIC software build revision number

Param No.	EDS Values	Read /Write	Default Value (EDS)	Parameter Range	Comments
35	WallSize	Read	0	0 - 6	Displays the currently selected tube wall size. See "WallSize" on page 64
36	BoreSize	Read	0	0 - 32	Displays the currently selected tube bore size. See "BoreSize" on page 64
37	PumpModel	Read	0	0 - 2	Displays the currently selected pump model. See "PumpModel" on page 62
38	PumpHead	Read	0	0 - 20	Displays the currently selected pump head. See "PumpHead" on page 63
39	PressureSensorModel	Read	0	0 - 3	Displays the currently selected pressure sensor model. Please see PressureSensorModel enum table below
40	PressureSensorSize	Read	0	0 - 5	Displays the currently selected pressure sensor size. Please see PressureSensorSize enum table below
41	FlowSensorModel	Read	0	0 - 4	Displays the currently selected flow sensor model. Please see FlowSensorModel enum table below
42	FlowSensorSize	Read	0	0 - 4	Displays the currently selected flow sensor size. Please see FlowSensorSize enum table below

Param No.	EDS Values	Read /Write	Default Value (EDS)	Parameter Range	Comments
43	Reverse	Read	0	0-1 (False/True)	If set the pump is set to run Counter-Clockwise
44	Running	Read	0	0-1 (False/True)	Set if the pump is running
45	LeakDetected	Read	0	0-1 (False/True)	Set if a leak is detected
46	MotorStallError	Read	0	0-1 (False/True)	If Set the pump has a Motor Stall Error. Please follow onscreen instructions
47	MotorSpeedError	Read	0	0-1 (False/True)	If set the pump has an over current error. Please follow onscreen instructions
48	OverCurrentError	Read	0	0-1 (False/True)	If set the pump has an over current error. Please follow onscreen instructions
49	OverVoltageError	Read	0	0-1 (False/True)	If set the set the pump has an over voltage error. Please follow onscreen instructions
50	Guard/Interlock	Read	0	0-1 (False/True)	If set then the guard has been opened. Please follow onscreen instructions to clear.
51	FlowHi-LoActive	Read	0	0-1 (False/True)	If set then the flow sensor low warning is active
52	FlowLo-LoActive	Read	0	0-1 (False/True)	If set the flow sensor low alarm is active
53	PressureHi-LoActive	Read	0	0-1 (False/True)	If set the pressure low warning is active

Param No.	EDS Values	Read /Write	Default Value (EDS)	Parameter Range	Comments
54	PressureLo-LoActive	Read	0	0-1 (False/True)	If set the pressure low alarm is active
55	FlowHi-HiActive	Read	0	0-1 (False/True)	If set the flow high alarm is active
56	FlowLo-HiActive	Read	0	0-1 (False/True)	If set the flow high warning is active
57	PressureHi-HiActive	Read	0	0-1 (False/True)	If set the pressure high alarm is active
58	PressureLo-HiActive	Read	0	0-1 (False/True)	If set the pressure high warning is active
59	SensorErrorInput1	Read	0	0-1 (False/True)	If set there is an error condition on sensor input 1
60	SensorErrorInput2	Read	0	0-1 (False/True)	If set there is an error condition on sensor input 2
61	EthernetIpMode	Read	0	0-1 (False/True)	If set the pump is in Ethernet IP Mode
62	EthernetIpActive	Read	0	0-1 (False/True)	If set Ethernet IP is active on the device

PumpModel

Enum Number	PumpModel
0	530
1	630
2	730

PumpHead

Enum Number	Pumphead	Default speed	Comments
0	505CA	0.1-220rpm	
1	313D	0.1-220rpm	
2	313D2	0.1-220rpm	
3	314D	0.1-220rpm	
4	314D2	0.1-220rpm	
5	520R	0.1-220rpm	
6	520R2	0.1-220rpm	
7	505L Continuous	0.1-220rpm	
8	505L Double	0.1-220rpm	
9	520 Sanitary	0.1-220rpm	
10	520 Industrial	0.1-220rpm	
11	620R	0.1-265rpm	Default is 0.1-165rpm. Max speed can be adjusted to 265 using the max speed parameter or screen
12	620L Continuous	0.1-265rpm	
13	620L Double	0.1-265rpm	

Enum Number	Pumphead	Default speed	Comments
14	620RE Sanitary	0.1-265rpm	
15	620RE4 Sanitary	0.1-265rpm	
16	620RE Industrial	0.1-265rpm	
17	620RE4 Industrial	0.1-265rpm	
18	720R	0.1-360rpm	
19	720 Sanitary	0.1-360rpm	
20	720 Industrial	0.1-360rpm	

WallSize

Enum Number	WallSize	Comments
0	0.8mm	
1	1.6mm	
2	2.4mm	
3	2.8mm	
4	3.2mm	
5	4.0mm	
6	4.8mm	

BoreSize

Enum Number	BoreSize	Comments
0	0.13mm	

Enum Number	BoreSize	Comments
1	0.19mm	
2	0.25mm	
3	0.38mm	
4	0.50mm	
5	0.63mm	
6	0.76mm	
7	0.80mm	
8	0.88mm	
9	1.02mm	
10	1.14mm	
11	1.29mm	
12	1.42mm	
13	1.52mm	
14	1.60mm	
15	1.65mm	
16	1.85mm	
17	2.05mm	
18	2.29mm	
19	2.54mm	
20	2.79mm	
21	3.20mm	
22	4.80mm	
23	6.40mm	

Enum Number	BoreSize	Comments
24	8.00mm	
25	9.60mm	
26	12.0mm	
27	12.7mm	
28	15.9mm	
29	16.0mm	
30	17.0mm	
31	19.0mm	
32	25.4mm	

PressureSensorModel

Enum Number	Pressure Sensor Model	Comments
0	None	
1	Press-N-0xx	
2	Parker Scilog	
3	Generic Pressure	

PressureSensorSize

Enum Number	Pressure Sensor Size	Comments
0	None	
1	PRESS_N_SIZE_025	
2	PRESS_N_SIZE_038	
3	PRESS_N_SIZE_050	
4	PRESS_N_SIZE_075	
5	PRESS_N_SIZE_100	

FlowSensorModel

Enum Number	Flow Sensor Model	Comments
0	None	
1	C0.55 V2.0	
2	Em-tec BioProTT	
3	FlexMag 4050C	
4	Generic Flow	

FlowSensorSize

Enum Number	Flow Sensor Size	Comments
0	None	
1	4050C_SIZE_38	
2	4050C_SIZE_12	
3	4050C_SIZE_34	
4	4050C_SIZE_1	

20 Sensors


Sensors can be connected to the pump to display the value, warnings and errors on pressure and or flow as selected.

Attached sensors allow the user to configure warning and alarm set points on the pump.

Each pump can support a maximum of one flow sensor and one pressure sensor at the same time.

20.1 Sensor wiring

Make sure the sensor is correctly wired to the pump before proceeding with set up. ("Sensor Wiring - IP31" on page 26 or "Input/output connectors - IP66" on page 33).

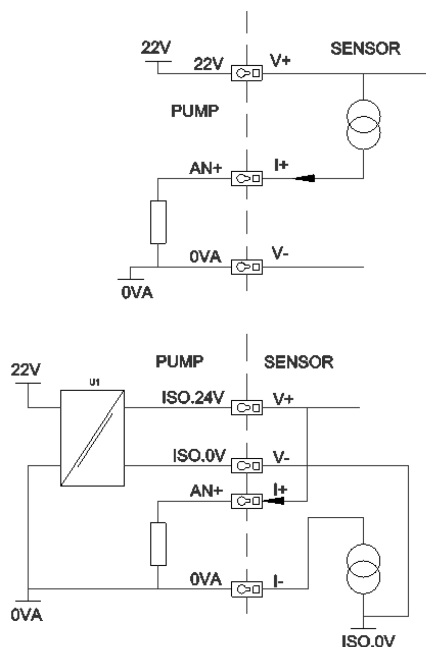

20.2 Setting up the sensors



From the control settings menu, using the \wedge / \vee keys, scroll to **Sensor settings** option and press **SELECT**



Using the \wedge / \vee keys, scroll to **Configure sensors** option and press **SELECT**



Using the \wedge / \vee keys, scroll to **Flow** or **Pressure** option and press SELECT. This selects the type of sensor to configure.



A list of supported flow sensor families are displayed. The example in the image above shows supported flow sensors. Using the \wedge / \vee keys, scroll to the desired flow sensor and press **SELECT**.



The input that the sensor is attached to needs to be assigned.

Using the \wedge / \vee keys, scroll to the desired flow sensor and press **SELECT**.

See Control wiring section for connection specifications.



Using the \wedge / \vee keys, scroll to the desired sensor size and press **SELECT**.



Using the \wedge / \vee keys, scroll to the desired output unit and press **SELECT**.

This choice will alter the units displayed on the home screen.



Set Alarm and Warning level

Using the \wedge / \vee keys, scroll to the alarm level to set up and press **SELECT**.



Using the \wedge / \vee keys, enter a value and press **SELECT** to store.

Each one of these defaults to none, once the user sets a value in the edit screens the alarm/warning will become active.



When a warning level is triggered the top or bottom bars will show orange



When an alarm band is triggered the pump will display the “sensor alarm detected” screen and the pump will stop.

20.3 Start up delay

Sets the delay from the motor starting to the alarms/warnings activating. Start-up delay activates on a motor start (irrelevant of mode, includes MAX).



From the control settings menu, using the Δ / ∇ keys, scroll to **Sensor settings** option and press **SELECT**



From the control settings menu, using the \wedge / \vee keys, scroll to **set sensor delay** option and press **SELECT**



Using the \wedge / \vee keys, set a value and press **SELECT** to store.

20.4 Generic Sensors

Generic Sensors allow any sensor with a 4-20mA output and a linear response to be used on the system. The sensor max flow/pressure ratings are shown in a table at the end of this section.



From the control settings menu, using the \wedge / \vee keys, scroll to **Sensor settings** option and press **SELECT**



Using the \wedge / \vee keys, scroll to **Configure sensors** option and press **SELECT**



Using the \wedge / \vee keys, scroll to **Flow** or **Pressure** option and press SELECT. This selects the type of sensor to configure.



Using the \wedge / \vee keys, scroll to **Generic flow sensor** or **Generic pressure sensor** option and press **SELECT**.



Using the \wedge / \vee keys, scroll to **4-20mA input 1** or **4-20mA input 2** option and press **SELECT**.
This depends on which connection the user has connected the sensor to.
See **Control wiring** section for connection specifications.
Only generic sensors which provide a 4-20mA output are supported.



Using the \wedge / \vee keys, select the sensor unit output type and press **SELECT**. Options in table below depending on sensor type selection:

Flow	Pressure
ul/min	Bar
ml/min	Psi
ml/hr	
l/min	
l/min	

After selecting the sensor unit type the user will progress onto the “calibrate generic sensor” screen.



Using the \wedge/v keys, change the value reported when the sensor input is at 4mA. Once satisfied with the value press **SELECT**.



Using the \wedge/v keys, change the value reported when the sensor input is at 20mA. Once satisfied with the value press **SELECT**.

Depending on the sensor and units selected the maximum values that can be set at below

Pressure Unit	Minimum	Maximum
PSI	-10.0	75
Bar	-0.689	5.171


Flow Unit	Minimum	Maximum
ul/min	0	60000000
ml/min	0	60000
ml/hr	0	900000
l/min	0	60
l/hr	0	900

The Warning / error levels screen will then be shown, refer to "Set Alarm and Warning level" on page 72. The error and warning values will default to the value set at 4mA and 20mA. The user should set up warnings and errors to suit their process.

Example

If using a 4-20mA sensor with a range of 0-10psi:

- Set the 4mA to 0psi
- Set the 20mA to 10psi
- The Alarm Max was set at 8psi
- The Warning Max was set at 7psi
- The Warning Min was set at 3psi
- The Alarm Min was set at 2psi

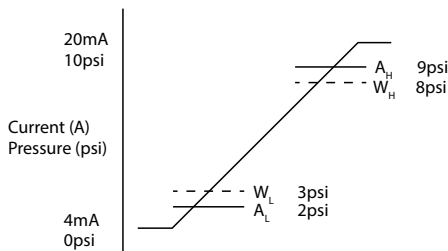

An alarm event is indicated by the solid lines (A_L , A_H) on the graph. During an alarm event the pump will show the alarm red screen and stop. This alarm is triggered by the sensor signal being equal to or greater than that set by the Alarm Max/Min or Ethernet Hi-Hi/Lo-Lo Parameters. The user has to acknowledge this screen on the pump.

A warning event is indicated by the dashed lines (W_L , W_H) on the graph. During a warning event the pump will show orange sections on the screen and a warning bit will flag on the Ethernet communications. This event is triggered by the sensor signal being equal to or greater than the value set by the Warning Max/Min or Ethernet Hi-Lo/Lo-Hi Parameters.

Note: It is normal to expect fluctuations in both pressure and flow systems using peristaltic pumps. This means that warning and alarm limits need to take short term spikes and changes into account when setting these limits.

Note: The pump has no control over the accuracy of the signals coming from the sensors and will simply respond to the signal levels received. Sensor accuracy is the responsibility of the sensor supplier and will be dependent on a range of system variables, for example fluid type, tube material and temperature.


20.5 Flow Sensor Reading

The flow sensor value can be read via the Flow sensor reading screen



21 Main menu

To access the main menu press the **MENU** button from one of the HOME screens or INFO screens.

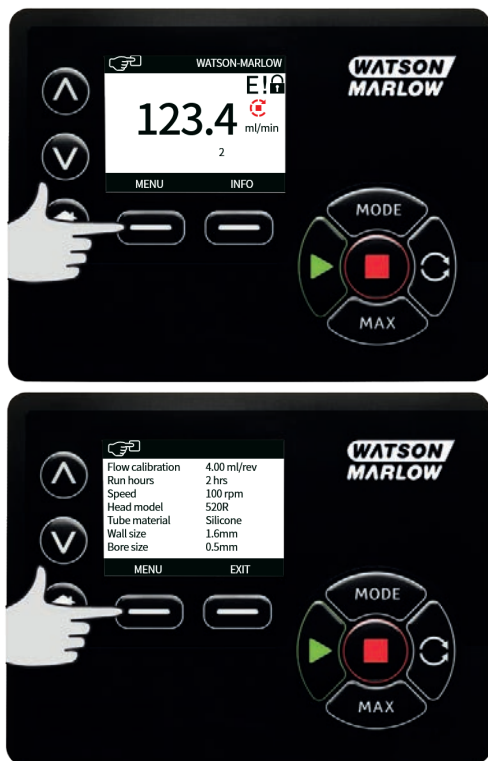

This will display the main menu as shown below. Use the \wedge / \vee keys to move the selection bar between the available options.

Press **SELECT** to choose an option.

Press **EXIT** to return to the screen from where the MENU was called.



21.1 Security settings

Security settings can be changed by selecting **SECURITY SETTINGS** from the Main menu.

Auto keypad lock

Press **ENABLE/DISABLE** to switch on/off the Auto keypad lock. When active the keypad will 'lock' after 20 seconds of inactivity.



Once locked it will display the screen below when any key is pressed. To unlock the keypad press the two **UNLOCK** keys together.



The padlock icon will appear on the operating mode home screen to show that keypad lock is activated.



Note that the STOP key will always work whether the keypad is locked or not.

PIN protection


Using the \wedge / \vee keys select **PIN protection** from the SECURITY SETTINGS menu and press **ENABLE/DISABLE** to switch on/off the PIN protection. If PIN protection has been enabled, a Master level PIN will be required to disable PIN lock.

Setting Master PIN

Setting the Master PIN protects all functionality. The Master is able to selectively enable functionality for two additional operators. These are defined as User 1 and User 2. They will be able to access this functionality by entering a PIN code assigned to them by the Master user. To set the Master PIN, scroll to Master level and press **ENABLE**.



To define a four digit Master PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.

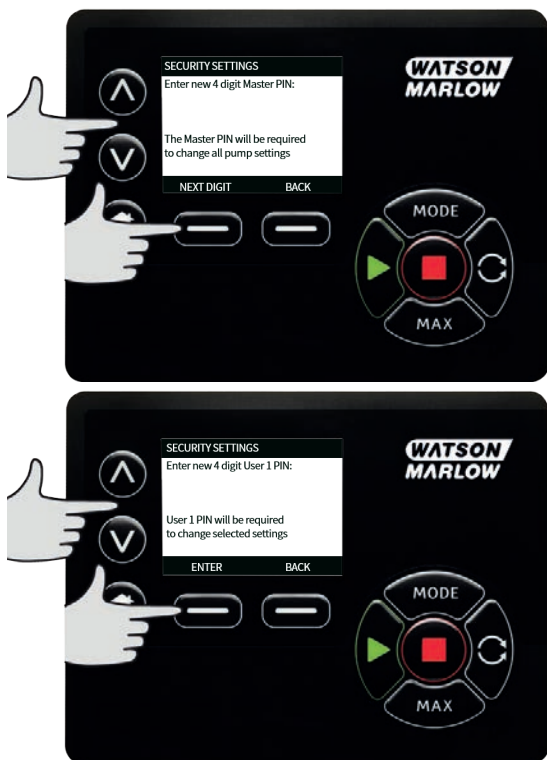

Now press **CONFIRM** to check that the number entered is the PIN you require. Press **CHANGE** to return to PIN entry.




The following screen will be displayed to indicate that the Master PIN has been applied to access all functionality. Press **NEXT** to selectively enable functionality access for User 1 and User 2.



Configure User 1 security settings

The PIN PROTECTION level screen will be displayed with User 1 highlighted, press **ENABLE** to configure User 1 security settings or scroll to configure an alternative User.

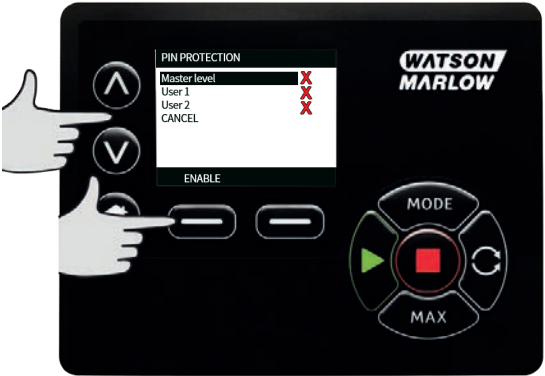

ENABLE user 1 security settings displays the PIN entry screen for User 1. To define a four digit User 1 PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.



Now press **CONFIRM** to verify that the number entered is the PIN you require. Press **CHANGE** to return to PIN entry.



To define the allowed functionality, use the \wedge / \vee keys to select the functionality and press **ENABLE**. User 1 PIN will allow access to only the enabled functionality, to disable functionality, highlight the enabled functionality and press **DISABLE**. When all the required functionality has been enabled, press **FINISH**.



Configure User 2 security settings

The PIN PROTECTION level screen will be displayed with User 2 highlighted, press **ENABLE** to configure User 2 security settings or scroll to configure an alternative User.



ENABLE user 2 security settings displays the PIN entry screen for User 2. To define a four digit User 2 PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.




To define the allowed functionality, use the \wedge / \vee keys to select the functionality and press **ENABLE**. User 2 PIN will allow access to only the enabled functionality, to disable functionality, highlight the enabled functionality and press **DISABLE**. When all the required functionality has been enabled, press **FINISH**.



Note: Once Security Settings for User 1 and User 2 have been set by the Master, only the Master PIN will allow access to Security Settings.

The HOME screen will be displayed. A PIN is now required to access all functionality. The Master PIN accesses all pump functionality and the User 1 and User 2 PINs access only the defined functionality. To enter the PIN, use the \wedge / \vee keys to select each digit from 0-9. Once you have the required digit press the **NEXT DIGIT** key. After selecting the fourth digit press **ENTER**.

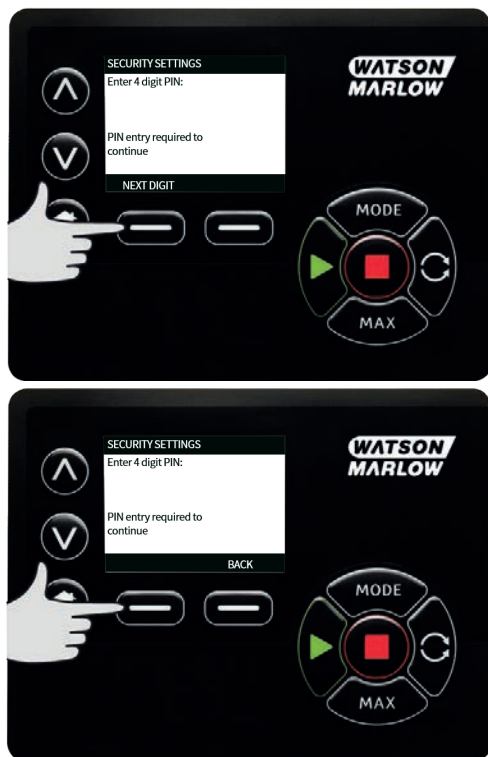

If an incorrect PIN has been entered the following screen will be displayed. NOTE: this screen will also display if the PIN entered does not allow access to that functionality.



If a PIN number is entered that is already in use, the following screen will be displayed, press **CHANGE** to input an alternative PIN or **EXIT** to abort



If the PIN entered does not allow access to the functionality the following screen will be displayed.



Keypad beep

From SECURITY settings scroll to Keypad beep using the \wedge / \vee keys and select **ENABLE**. The pump will now beep at every key press.



PIN entry on start-up

The setting **PIN entry during start-up** can be used to configure the software to choose if PIN entry is required during start up.

This feature also means that auto-restart capability is now independent of PIN code entry after start up.

If this setting is enabled ✓ then the pump will require the PIN code to be entered before the pump will enter the home control screen after a power cycle.

If this setting is disabled ✕ then the pump will not require the PIN code to be entered before the pump will enter the home control screen after a power cycle.

The auto-restart response of the pump after a power cycle is now independent of PIN entry.

The default setting, is enabled ✓ so a PIN code will be required after a power cycle before the pump will enter the home control screen.

Disabling this feature does not change any other aspects of PIN code operation. Anyone wishing to modify pump settings will still need to enter the PIN code.

21.2 General settings

To view the general settings menu, select **GENERAL SETTINGS** from the main menu.

Auto restart

This pump includes a feature called auto restart. This setting only applies to pump operation in manual mode.

If the pump is operating in manual mode and this feature is enabled (configured to 'yes'), it will change the way the pump responds to a power cycle.

When Auto restart is enabled it will cause the pump to remember it's current operating settings when power is lost and to resume using these as soon as power comes back on.

The '!' symbol is also displayed when the auto restart feature is enabled to warn users that the pump has been configured in a way that could result in unexpected operation.

Press **ENABLE/DISABLE** to turn the auto restart feature on/off (Manual mode).





Do not use auto restart for more than 12 times in 24 hours. We recommend remote control where a high number of starts is required.

Flow units

The current chosen flow unit is displayed on the right hand side of the screen. To change flow units move the selection bar over the flow unit menu entry and press **SELECT**.

Use the \wedge / \vee keys to move the selection bar over the required flow unit, then press **SELECT**. All flow rates displayed on screens will now be in the chosen units.



If a mass flow unit is selected, the specific gravity of the fluid must be entered. The following screen is displayed.



Use the \wedge / \vee keys to enter the value of the specific gravity, and press **SELECT**.


Pump label

The pump label is a user defined 20 digit alphanumeric label which is displayed in the header bar of the home screen. To define or edit the pump label, move the selection bar over the Pump label menu entry and press **SELECT**. If a pump label has been previously defined, this will be displayed on screen to allow editing, otherwise it will display the default label "WATSON-MARLOW".



Use the \wedge / \vee keys to scroll through the available characters for each digit. The available characters are 0-9, A-Z and SPACE.

Press **NEXT** to move onto the next character, or **PREVIOUS** to move back to the previous character.

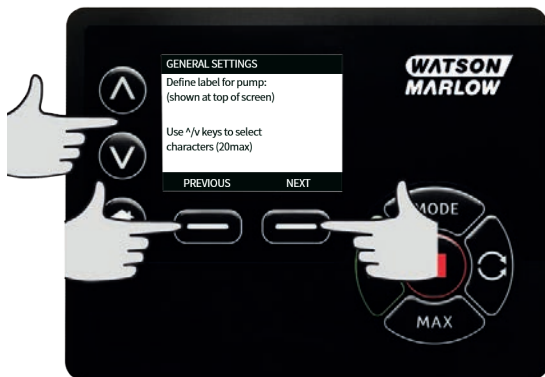

Press **FINISH** to save the entry and return to the general settings menu.



Pumphead type

Select **GENERAL SETTINGS** from the main menu.

Use the \wedge / \vee keys to move the selection bar over **Pumphead type** and press **SELECT**. The following screen will be displayed.



Use the \wedge / \vee keys to move the selection bar over **Pumphead** and press **SELECT**.



Use the \wedge / \vee keys to move the selection bar over the required pumphead type and press **SELECT**.



Tube size and tube material

Select **Tube size** from GENERAL SETTINGS, then use the \wedge / \vee keys to move the selection bar over **Bore size** and press **SELECT**.



Use the \wedge / \vee keys to move the selection bar over the tube size to be used and press **SELECT**.



If a LoadSure element has been selected then the tube size is displayed as pressure and bore.



This screen also allows you to select the tube material used.

Use the \wedge / \vee keys to move the selection bar over **Tube material** and press **SELECT**.




Use the \wedge / \vee keys to move the selection bar over the tube material to be used and press **SELECT**.



The PUMPHEAD MODEL screen allows the tube Lot Number to be recorded for future reference. Use the \wedge \vee keys to move the selection bar over **Tube lot number** and press **SELECT**.

Use the \wedge \vee keys to scroll through the available characters for each digit. The available characters are 0-9, A-Z, and SPACE.

Press **NEXT** to move onto the next character, or **PREVIOUS** to move back to the last character.

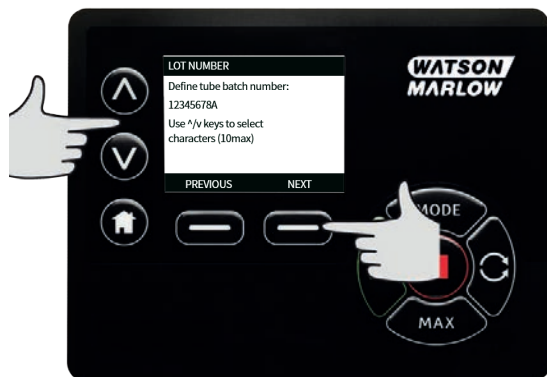


Press **FINISH** to save the entry and return to the general settings menu.

Restore defaults

To restore the factory default settings select **Restore defaults** from the general settings menu.

There are two confirmation screens to ensure that this function is not carried out in error.

Press **CONFIRM** followed by **RE-CONFIRM** to restore the defaults.

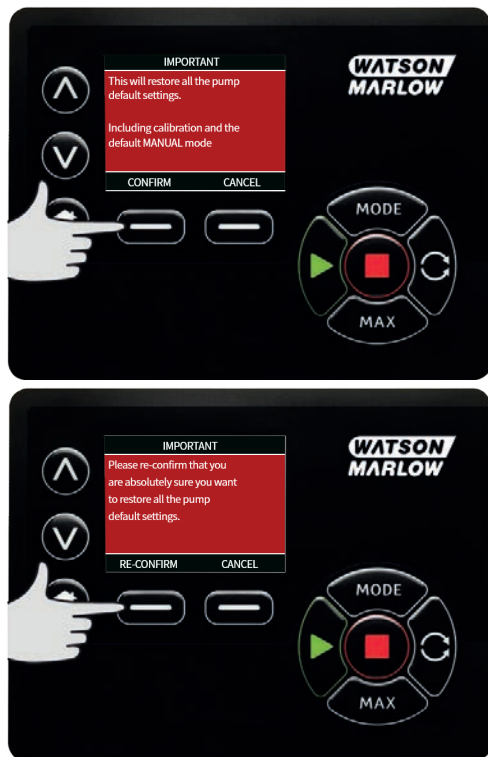

Language

Select language from the general settings menu to choose an alternative display language for the pump. The pump must be stopped before changing the language.

Use the \wedge/\vee keys to move the selection bar to your required language. Press **SELECT** to confirm.



Your selected language will now be displayed on screen. Press **CONFIRM** to continue, all displayed text will now appear in your chosen language.

Press **REJECT** to return to the language choice screen.



MODE menu

Selecting **MODE** menu from the main menu will navigate you to access the sub-menu shown below. This is the same as pressing the **MODE** key. Please see "Mode menu" on page 1 for further details.

Reset run hours

Select **Reset run hours** from the control settings menu.

Select **RESET** to zero the run hours counter. The run hours counter can be viewed by pressing **INFO** from your home screen. The following screen will be displayed. Press **RESET** to reset the run hours or **CANCEL** to return to the CONTROL SETTINGS menu.



22 Help

22.1 Help

Select Help from the main menu to access the help screens.



SOFTWARE VERSIONS	BOOTLOADER VERSIONS
Main Processor Code: 1.2	Main Processor Code: 1.2
HMI Processor Code: 1.2	HMI Processor Code: 1.2
HMI Screen Resources: 1.2	
PROHIBITORY Message Code: 1.2	
BOOTLOADER BACK	BACK

23 Troubleshooting

If the pump display remains blank when the pump is switched on, make the following checks:

- Check that the mains power is available to the pump.
- Check the fuse in the wall plug if one is present.
- Check the position of the voltage selector switch.
- Check the mains power switch at the rear of the pump.
- Check the fuse in the fuse holder in the centre of the switch plate at the rear of the pump.

If the pump runs but there is little or no flow, make the following checks:

- Check that fluid is supplied to the pump.
- Check for any kinks or blockages in the lines.
- Check that any valves in the line are open.
- Check that the tube and rotor are in the pumphead.
- Check that the tube is not split or burst.
- Check that the correct wall-thickness tube is being used.
- Check the direction of rotation.
- Check that the rotor is not slipping on the drive shaft.

If the pump turns on, but will not run:

- Check the remote stop function and configuration.
- Check the mode you are in, are you in analog mode.
- Try to operate and run the pump in manual mode.

23.1 Error codes

If an internal error occurs, an error screen with a red background is displayed. Note: Signal out of range, over signal and leak detected error screens report the nature of an external condition. They do not flash.

Error code	Error condition	Suggested action
Er 0	FRAM write error	Attempt to reset by switching power OFF/ON. Or seek support.
Er 1	FRAM corruption	Attempt to reset by switching power OFF/ON. Or seek support.
Er 2	FLASH write error during drive update	Attempt to reset by switching power OFF/ON. Or seek support.

Error code	Error condition	Suggested action
Er 3	FLASH corruption	Attempt to reset by switching power OFF/ON. Or seek support.
Er 4	FRAM shadow error	Attempt to reset by switching power OFF/ON. Or seek support.
Er 9	Motor stalled	Stop pump immediately. Check pumphead and tube. Power OFF/ON may reset. Or seek support.
Er10	Tacho fault	Stop pump immediately. Power OFF/ON may reset. Or seek support.
Er14	Speed error	Stop pump immediately. Power OFF/ON may reset. Or seek support.
Er15	Over current	Stop pump immediately. Power OFF/ON may reset. Or seek support.
Er16	Over voltage	Stop pump immediately. Check supply. Power OFF/ON may reset.
Er17	Under voltage	Stop pump immediately. Check supply. Power OFF/ON may reset.
Er20	Signal out of range	Check analog control signal range. Trim signal as required. Or seek support.
Er21	Over signal	Reduce the analog control signal.
Err50	Communication error (internal pump communications error and not a network error)	Attempt to reset by switching power OFF/ON. Or seek support.

23.2 Technical support

Watson-Marlow Fluid Technology Group
Falmouth, Cornwall
TR11 4RU
UK

Contact your local Watson-Marlow representative for support.
www.wmftg.com/contact

24 Drive maintenance

There are no user serviceable parts inside the pump. Please contact your local Watson-Marlow representative to arrange repair.

25 Drive spares

Description	Part No.
Replaceable main fuse, type T5A, H 250V (Pack of 5)	
Foot (Pack of 5)	MNA2101A
Glands (Std)	GR0056
Glands (EMC)	GR0075
M12 cover	MN2943B
M12 collars insulated	MN2934T
M12 collars non insulated	MN2935T
Ethernet Cable, M12D Right Angle 4 pin plug to M12D Straight 4 pin plug, CAT 5 SHIELDED, 3m	059.9121.000
Ethernet Cable, M12D Right Angle 4 pin plug to RJ45, CAT 5 SHIELDED, 3m	059.9122.000
Ethernet Cable, RJ45 to RJ45, CAT 5e SHIELDED, 3m	059.9123.000
RJ45(skt) TO M12 D CODE (skt) ADAPTER IP68	059.9124.000
Leak Detector Kit for 630 En	069.9151.000
Leak Detector Kit for 630 EnN	069.9161.000
RJ45 to RJ45 Patch Cable	059.9125.000

26 Pumphead replacement



Always isolate the pump from the mains power supply before opening any guard or track, or performing any positioning, removal or maintenance operation.

26.1 Pumphead replacement


520R

620RE, 620RE4 and 620R safeguarding



Primary safety on 630 series pumps is provided by the tool-lockable pumphead guard. Secondary (backup) protection is provided in the form of an electrical guard switch which stops the pump if the pumphead guard is opened. The electrical guard switch on cased pumps should never be used as primary protection. Always disconnect the mains power supply to the pump before opening the pumphead guard.


Removal

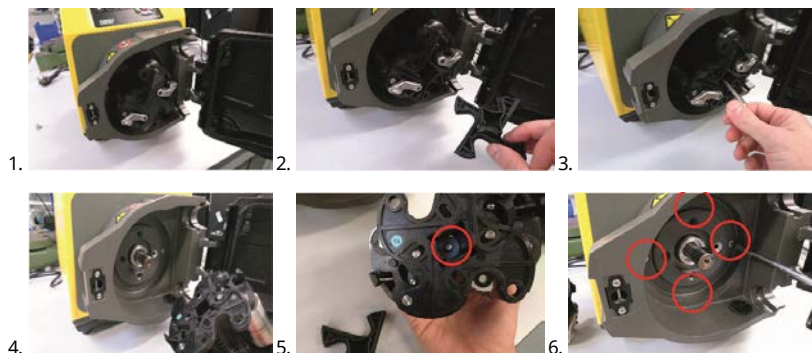


Refitting

Check adaptor ring

Ensure correct adaptor ring fitted

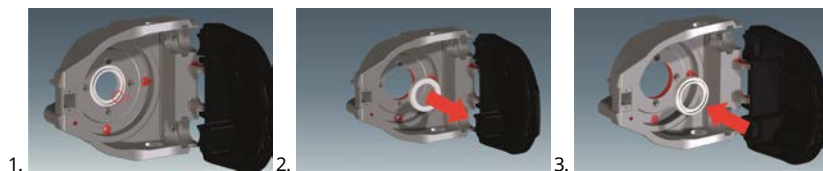

Rotor refitting

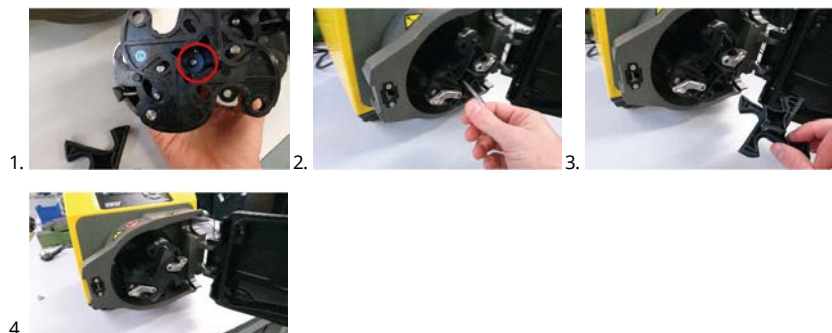

Ensure that the rotor hub spacer is still installed.

620R, 620RE and 620RE4 waste port



27 Tube replacement




Always isolate the pump from the mains power supply before opening any guard or track, or performing any positioning, removal or maintenance operation.

27.1 Continuous tubing

620R



620L

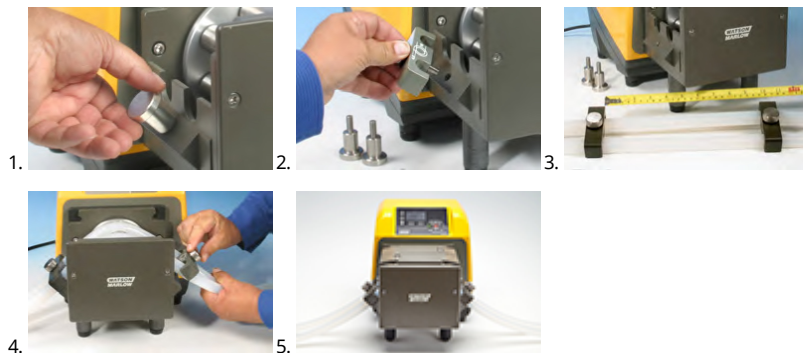

$\leq 8.0\text{mm} = 230\text{mm}$,

12mm/16mm = 240mm

27.2 Tube elements

630Du/RE and 630Du/RE4



630 Sanitary connectors



630 Industrial connectors



630Du/L




General guide to cleaning with solvents

Chemical	Cleaning precautions
Aliphatic hydrocarbons	Remove guard. Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Aromatic hydrocarbons	Remove guard. Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Ketone solvents	Remove guard. Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Halogenated/chlorinated solvents	Not recommended: possible risk to polycarbonate tube clamp adjusters and polypropylene tube clamp locators.
Alcohols, general	No precaution necessary.
Glycols	Minimize rotor cap and clutch boot exposure to less than one minute (risk of attack).
Estersolvents	Remove guard. Minimize rotor cap and tube clamp location cap exposure to less than one minute (risk of attack).
Ether solvents	Not recommended: possible risk to polycarbonate tube clamp adjusters and polypropylene tube clamp locators.

28 Ordering information


28.1 Pump part numbers

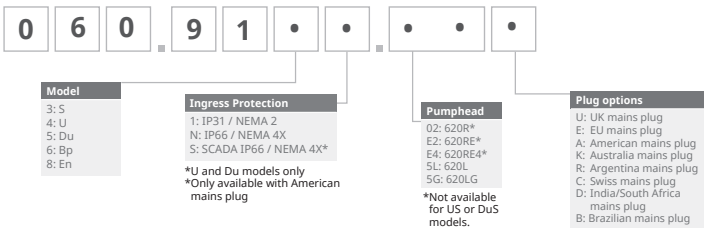

*Special NEMA module 069.911F.100 Ethernet Watertight Module (630F) IP66 NEMA 4X is required for KROHNE flow sensor, combined with IP31 pump

28.2 Tubing and element part numbers

Continuous tubing for 620R pumpheads

					
mm	inch	#	Marprene	Bioprene	Pumpsil silicone
6.4	1/4	26	0064.032	933.0064.032	913.A064.032
9.6	3/8	73	0096.032	933.0096.032	913.A096.032
12.7	1/2	82	0127.032	933.0127.032	913.A127.032
15.9	5/8	184	0159.032	933.0159.032	913.A159.032
mm	inch	#	STA-PURE Series PCS	Neoprene	
6.4	1/4	26	961.0064.032	920.0064.032	
9.6	3/8	73	961.0096.032	920.0096.032	
12.7	1/2	82	961.0127.032	920.0127.032	
15.9	5/8	184	961.0159.032	920.0159.032	
mm	inch	#	PureWeld XL	STA-PURE Series PFL	
6.4	1/4	26		966.0064.032	
9.6	3/8	73	941.0096.032	966.0096.032	
12.7	1/2	82	941.0127.032	966.0127.032	
15.9	5/8	184		966.0159.032	

LoadSure tube elements (620RE and 620RE4)

	12mm Tri-clamp 3/4in	17mm Tri-clamp 3/4in	12mm Cam and Groove 3/4in	17mm Cam and Groove 3/4in
STA-PURE Series PCS	961.0120.PFT	961.0170.PFT		
STA-PURE Series PFL	966.T120.SST	966.T170.SST		
Bioprene TM	933.P120.PFT	933.P170.PFT		
Bioprene TL	933.0120.PFT	933.0170.PFT		
Pumpsil silicone	913.A120.PFT	913.A170.PFT		
Marprene TM			902.P120.PPC	902.P170.PPC
Marprene TL			902.0120.PPC	902.0170.PPC
Neoprene			920.0120.PPC	920.0170.PPC

Note:  = for 4 bar use

620L tubing codes

Marprene		Dispensing information	
		Bore (mm)	Litres/rev
902.E080.K40	Y element	8.0	0.01689
902.E120.K40		12.0	0.03029
902.E160.040		16.0	0.04251
902.0080.040	Continuous	8.0	0.01689
902.0120.040		12.0	0.03029
902.0160.040		16.0	0.04251

Bioprene		Dispensing information	
		Bore (mm)	Litres/rev
933.E080.K40	Y element	8.0	0.01689
933.E120.K40		12.0	0.03029
933.E160.040		16.0	0.04251
933.0080.040	Continuous	8.0	0.01689
933.0120.040		12.0	0.03029
933.0160.040		16.0	0.04251

Pumpsil silicone		Dispensing information	
		Bore (mm)	Litres/rev
913.AE80.K40	Y element	8.0	0.01672
913.A12E.K40		12.0	0.03214
913.A16E.K40		16.0	0.04353
913.A080.040	Continuous	8.0	0.01672
913.A120.040		12.0	0.03214
913.A160.040		16.0	0.04353

Neoprene		Dispensing information	
		Bore (mm)	Litres/rev
920.E080.K40	Y element	8.0	0.01721
920.E120.K40		12.0	0.02901
920.E160.K40		16.0	0.05004
920.0080.040	Continuous	8.0	0.01721
920.0120.040		12.0	0.02901
920.0160.040		16.0	0.05004

620LG element codes

STA-PURE Series PCS		Dispensing information	
		Bore (mm)	Litres/rev
961.E080.K40	Y element	8.0	0.01979
961.E120.K40		12.0	0.03349
961.E160.K40		16.0	0.04689

STA-PURE Series PFL		Dispensing information	
		Bore (mm)	Litres/rev
966.E080.K40	Y element	8.0	0.01979
966.E120.K40		12.0	0.03349
966.E160.K40		16.0	0.04689

28.3 CIP and SIP procedures

General instructions

- Unlock the guard and disengage the rollers.
- Close the guard and squeeze against the track until the latch clicks.
- Observe a 1m safety area.

CIP

- LoadSure tube elements and continuous tubing can be cleaned using CIP process.
- Ensure that the tubing material is chemically compatible with the cleaning agent that is to be used.
- If cleaning agents are spilled over the pumphead, wash down immediately.
- Ensure that controlled waste pipe work is fitted to allow safe release of cleaning agent in the event of a tube failure.

SIP

- Only STA-PURE Series PCS tube elements can be used in steam-in-place sterilisation processes.
- STA- PURE Series PCS tubing elements can be sterilised to 3A Class 2 and FDA minimum recommended standard which is 121C (250F) at 1 bar (14.5 psi) saturated steam for 20 minutes.
- Monitor the process continuously.
- If a tube failure occurs, shut down the process. Do not touch the pumphead until a 20 minute cooling down period has been observed.
- Ensure a 20 minute acclimatisation period is observed before running the pump following SIP.
- Ensure that controlled waste pipework is fitted to allow a safe release of steam in the event of a tube failure.
- Ensure a 1m safety zone is maintained around the pumphead during SIP cycles.



Ensure that the pumphead door is closed and locked before SIP cleaning commences.

28.4 Pumphead spares


620RE, RE4 and 620R pumphead spares



Number	Spare	Description
	063.4211.000	620R Mark II pumphead
	063.4231.000	620RE Mark II pumphead
	063.4431.000	620RE4 Mark II pumphead
1	069.4101.000	620RTC: continuous tubing clamp set
2	MRA0249A	Roller assembly (element pumphead)
2	MRA0250A	Roller assembly (continuous pumphead)
3	MR2053B	Clip: Oddie retainer
3	MR2054T	Oddie washer
3	SG0021	Oddie spring
3	CX0150	Oddie circlip (snap ring)
4	MRA3020A	Track assembly
5	MR2027T	Controlled waste threaded fitting 620R, RE, RE4

Number	Spare	Description
6	MR2028M	Controlled waste port blanking plug
7	MR2055M	Rotor cover
8	MRA0296A	620R, RE, RE4 Complete Guard kit (Including hinge pins)
9	MRA0320A	Rotor assembly 2-roller element
9	MRA0321A	Rotor assembly 4-roller element
9	MRA0322A	Rotor assembly 2-roller continuous
10	XX0220	Key - metal
11	MR2096T	Controlled waste threaded fitting locking nut
12	MR2029T	Cased drive MG605 shaft/rotor hub spacer
13	FN0488	Cased drive track locating screws M6 x 10
13	FN0523	Close-coupled track locating screws
14	FN0581	Rotor locating washer M6
15	MR2251B	Rotor locating bolt M6 x 25
16	TT0006	5mm Allen key
17	MA0017	Magnet

620L and 620LG pumphead spares

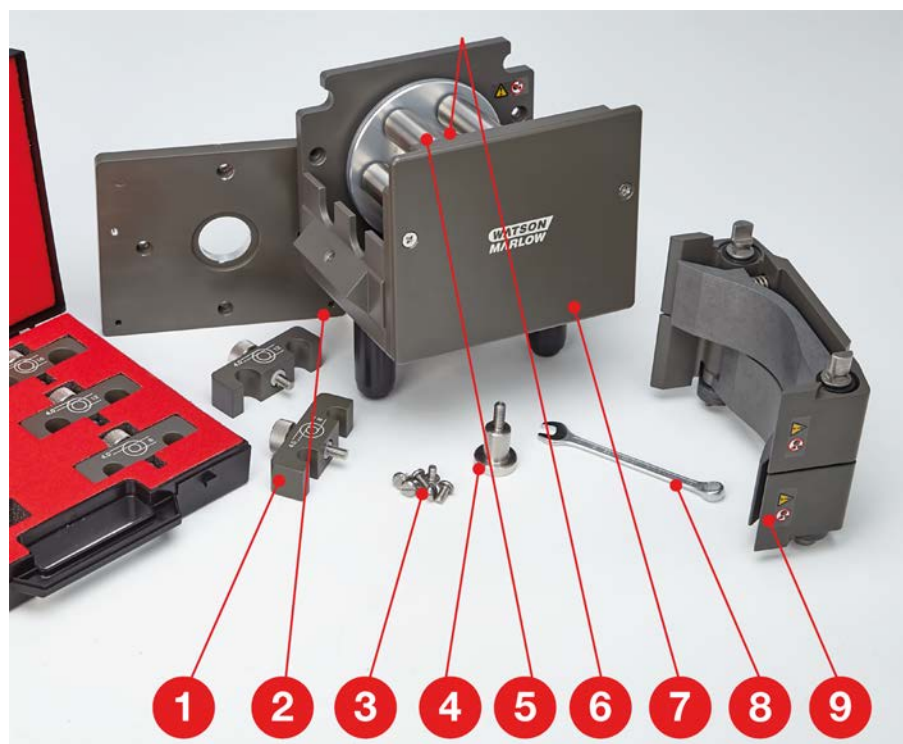

Number	Spare	Description
	063.4603.000	620L pumphead
	063.4623.000	620LG pumphead
1	069.4001.000	Tube clamp set
2	MR3017S	Adaptor plate
3	FN0493	M6x12 screws x 6
4	MR0890T	Tube locating peg
5	MRA0150A	Rotor assembly
6	BB0018	Shaft bearing
7	MR0850S	Front plate

Number	Spare	Description
8	TT0005	10mm / 3/8in spanner
9	MRA3026A	Track assembly

29 Performance data

29.1 620RE, 620RE4 and 620R performance data

Pumping conditions

All performance figures in this operating instruction have been recorded against peak pipeline pressures.

This pump is rated to 4 bar (58psi) peak pressure when fitted with a 620RE, 620RE4 or 620LG pumphead using high-pressure tubing. However, it will generate in excess of 4 bar (58psi) peak pressure if the pipeline is restricted. Where it is important that 4 bar (58psi) is not exceeded, pressure relief valves should be installed in the pipeline.

Viscosity handling is maximised by using 4.0mm wall LoadSure elements with the 620RE and 620RE4 pumpheads.

Flow rates are normalised test values obtained using new tubing with the pumphead rotating clockwise pumping water at 20C with negligible inlet and discharge pressures. Actual flow rates achieved may vary because of changes in temperature, viscosity, inlet and discharge pressures, system configuration and tubing performance against time. Flow rates may also vary due to normal manufacturing tolerances of the tubing. These tolerances will make flow rate variance more pronounced at smaller bore sizes.

For precise and repeatable performance it is important to determine flow rates under operating conditions for each new piece of tubing. 620R and 620L family pumpheads' flow rates are directly proportional to rotor speed. If you wish to run the pump at a speed not shown in the tables below, flow figures can be reached by dividing the maximum flow shown in the tables below by the maximum rpm figure, and multiplying the result by your required speed in rpm.

In normal circumstances, rotor and tube life are maximised if the pumphead is run slowly, particularly when pumping at high pressure. However, to maintain performance at pressures above 2 bar, avoid running the pumphead below 50rpm. If low-flow, high-pressure operation is necessary, switching to a smaller tube is recommended.

STA-PURE Series PCS, STA-PURE Series PFL and Marprene™ tubing are hard to compress when new. When using tubing made of these materials, the first five pumphead revolutions should be at a speed of 10rpm or greater. If the pump is run slower, the safety system built into pump drive's software may cause it to stop and display an over-current error message.

Note: Flow rates quoted have been rounded for simplicity, but are accurate to within 5% - well within the normal tubing tolerance variation of flow rate. They should therefore be taken as a guide. Real flow rates in any application must be determined empirically.

620RE, 620RE4 and 620R flow rates - Metric (SI)

630 STA-PURE Series PCS, STA-PURE Series PFL, Neoprene, l/min								
	620R				620RE		620RE4	
Speed rpm	6.4mm	9.6mm	12.7mm	15.9mm	12.0mm	17.0mm	12.0mm	17.0mm
0.1	0.001	0.003	0.004	0.01	0.004	0.01	0.003	0.01

630 STA-PURE Series PCS, STA-PURE Series PFL, Neoprene, l/min								
620R					620RE		620RE4	
Speed rpm	6.4mm	9.6mm	12.7mm	15.9mm	12.0mm	17.0mm	12.0mm	17.0mm
265	3.2	6.6	11	16	11	18	9.0	13
630 Marprene TL, Bioprene TL, l/min								
620R (standard)					620RE (standard)		620RE4 (standard)	
Speed rpm	6.4mm	9.6mm	12.7mm	15.9mm	12.0mm	17.0mm	12.0mm	17.0mm
0.1	0.001	0.003	0.004	0.01	0.004	0.01	0.003	0.005
265	3.4	6.6	11	12	9.8	18	8.3	12
630 Marprene TM, Bioprene TM, l/min								
620RE (hard)					620RE4 (hard)			
Speed rpm	12.0mm		17.0mm		12.0mm		17.0mm	
0.1	0.004		0.01		0.003		0.004	
265	9.8		16		8.3		11	
630 Pumpsil silicone, l/min								
620R					620RE		620RE4	
Speed rpm	6.4mm	9.6mm	12.7mm	15.9mm	12.0mm	17.0mm	12.0mm	17.0mm
0.1	0.001	0.003	0.004	0.01	0.004	0.01	0.003	0.004
265	3.2	7.2	11	15	10	16	8.7	11

620RE, 620RE4 and 620R flow rates - US (Imperial)

630 STA-PURE Series PCS, STA-PURE Series PFL, Neoprene, USGPM								
620R					620RE		620RE4	
Speed rpm	6.4mm	9.6mm	12.7mm	15.9mm	12.0mm	17.0mm	12.0mm	17.0mm
0.1	0.0003	0.001	0.001	0.002	0.001	0.002	0.001	0.001
265	0.8	1.8	2.8	4.3	2.8	5.1	2.4	3.5
630 Marprene TL, Bioprene TL, USGPM								
620R (standard)					620RE (standard)		620RE4 (standard)	
Speed rpm	6.4mm	9.6mm	12.7mm	15.9mm	12.0mm	17.0mm	12.0mm	17.0mm
0.1	0.0003	0.001	0.001	0.002	0.001	0.002	0.001	0.001
265	0.9	1.8	2.8	3.0	2.6	4.7	2.2	3.3
630 Marprene TM, Bioprene TM, USGPM								
620RE (hard)					620RE4 (hard)			
Speed rpm	12.0mm		17.0mm		12.0mm		17.0mm	
0.1	0.001		0.002		0.001		0.001	
265	2.6		4.1		2.2		2.9	
630 Pumpsil silicone, USGPM								
620R					620RE		620RE4	
Speed rpm	6.4mm	9.6mm	12.7mm	15.9mm	12.0mm	17.0mm	12.0mm	17.0mm
0.1	0.0003	0.001	0.001	0.001	0.001	0.002	0.001	0.001
265	0.8	1.9	2.9	3.9	2.7	4.3	2.3	3.0

620L and 620LG flow rates

Note: Rates apply to Y elements and two channels of continuous tubing combined.

620L flow rates (2 bar pressure capacity)

620L, Neoprene, l/min				620L, Neoprene, USGPM			
Speed rpm	Tube bore (4.0mm wall)			Speed rpm	Tube bore (4.0mm wall)		
	8.0mm	12.0mm	16.0mm		8.0mm	12.0mm	16.0mm
0.1	0.002	0.003	0.005	0.1	0.0005	0.0008	0.0013
265	4.6	7.7	13.3	265	1.20	2.03	3.50

620L, Marprene, Bioprene, l/min				620L, Marprene, Bioprene, USGPM			
Speed rpm	Tube bore (4.0mm wall)			Speed rpm	Tube bore (4.0mm wall)		
	8.0mm	12.0mm	16.0mm		8.0mm	12.0mm	16.0mm
0.1	0.002	0.003	0.004	0.1	0.0004	0.0008	0.0011
265	4.5	8.0	11.3	265	1.18	2.12	2.98

620L, Pumpsil silicone, l/min				620L, Pumpsil silicone, USGPM			
Speed rpm	Tube bore (4.0mm wall)			Speed rpm	Tube bore (4.0mm wall)		
	8.0mm	12.0mm	16.0mm		8.0mm	12.0mm	16.0mm
0.1	0.002	0.003	0.004	0.1	0.0004	0.0008	0.0011
265	4.4	8.5	11.5	265	1.17	2.25	3.05

620LG flow rates (4 bar pressure capacity)

620L, STA-PURE Series PCS, STA-PURE Series PFL, l/min				620L, STA-PURE Series PCS, STA-PURE Series PFL, USGPM			
Speed rpm	Tube bore (4.0mm wall)			Speed rpm	Tube bore (4.0mm wall)		
	8.0mm	12.0mm	16.0mm		8.0mm	12.0mm	16.0mm
0.1	0.002	0.003	0.005	0.1	0.0005	0.0009	0.0012
165	3.1	5.7	7.8	165	0.81	1.52	2.05
265	5.2	9.0	12.4	265	1.39	2.38	3.28

30 Trademarks

Watson-Marlow, LoadSure, Qdos, ReNu, LaserTraceability, Pumpsil, PureWeld XL, Bioprene, Marprene are registered trademarks of Watson-Marlow Limited. Tri-Clamp is a registered trademark of Alfa Laval Corporate AB.

STA-PURE Series PCS and STA-PURE Series PFL are trademarks of W.L.Gore and Associates.

EtherNet/IP™ is a trademark of ODVA, Inc.

Studio 5000® is a trademark of Rockwell Automation.

31 Disclaimers

The information contained in this document is believed to be correct but Watson-Marlow Fluid Technology Group accepts no liability for any errors it contains and reserves the right to alter specifications without notice.

WARNING: This product is not designed for use in and should not be used for, patient-connected applications.

32 Publication history

m-630en-01 530 EN pump

First published 04.2020